

# Work Health and Safety (How to Manage and Control Asbestos in the Workplace Code of Practice) approval 2014

Notifiable instrument NI2014–671

made under the

**Work Health and Safety Act 2011, s 274 (Approved codes of practice)**

---

**1 Name of instrument**

This instrument is the *Work Health and Safety (How to Manage and Control Asbestos in the Workplace Code of Practice) Approval 2014*.

**2 Commencement**

This instrument commences on the day after notification.

**3 Code of Practice Approval**

I approve the attached *How to Manage and Control Asbestos in the Workplace Code of Practice*. I am satisfied that this code of practice was developed by a process described in section 274 (2) of the *Work Health and Safety Act 2011*.

Mick Gentleman  
Minister for Workplace Safety and Industrial Relations

17 December 2014

# **HOW TO MANAGE AND CONTROL ASBESTOS IN THE WORKPLACE**


## **Code of Practice**

Safe Work Australia is an Australian Government statutory agency established in 2009. Safe Work Australia consists of representatives of the Commonwealth, state and territory governments, the Australian Council of Trade Unions, the Australian Chamber of Commerce and Industry and the Australian Industry Group.

Safe Work Australia works with the Commonwealth, state and territory governments to improve work health and safety and workers' compensation arrangements. Safe Work Australia is a national policy body, not a regulator of work health and safety. The Commonwealth, states and territories have responsibility for regulating and enforcing work health and safety laws in their jurisdiction.

ISBN 978-0-642-33315-5 [PDF]

ISBN 978-0-642-33316-2 [RTF]

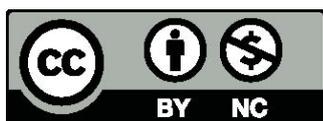

### **Creative Commons**

Except for the Safe Work Australia logo, this copyright work is licensed under a Creative Commons Attribution-Noncommercial 3.0 Australia licence. To view a copy of this licence, visit

<http://creativecommons.org/licenses/by-nc/3.0/au/>

In essence, you are free to copy, communicate and adapt the work for non commercial purposes, as long as you attribute the work to Safe Work Australia and abide by the other licence terms.

## Table of Contents

<b>FOREWORD .....</b>	<b>6</b>
<b>SCOPE AND APPLICATION .....</b>	<b>6</b>
<b>1. INTRODUCTION.....</b>	<b>8</b>
1.1 What are the prohibitions on asbestos in the workplace? .....	8
1.2 Who has duties to manage and control asbestos or ACM? .....	9
1.3 The meaning of key terms.....	11
<b>2. MANAGING RISKS ASSOCIATED WITH ASBESTOS AND ACM .....</b>	<b>13</b>
2.1 what is involved in managing risks? .....	13
2.2 Identifying if asbestos or ACM is at the workplace.....	14
2.3 Assuming asbestos or ACM is present .....	16
2.4 risk assessment If Friable Asbestos is identified or assumed at a workplace.....	17
2.5 Arranging a sample to identify asbestos .....	18
2.6 Indicating the presence of asbestos in the workplace.....	19
2.7 ASSESSING THE risk OF EXPOSURE .....	20
<b>3. ASBESTOS REGISTER .....</b>	<b>22</b>
3.1 What is an asbestos register? .....	22
3.2 Reviewing and revising an asbestos register .....	23
3.3 Accessing an asbestos register.....	23
3.4 Transferring an asbestos register.....	24
<b>4. ASBESTOS MANAGEMENT PLAN.....</b>	<b>25</b>
4.1 What is an asbestos management plan? .....	25
4.2 Reviewing an asbestos management plan.....	25
4.3 Accessing an asbestos management plan.....	26
<b>5. MANAGING OTHER ASBESTOS-related risks .....</b>	<b>27</b>
5.1 Naturally occurring asbestos .....	27
5.2 Contaminated sites.....	28
5.3 Demolition and refurbishment work.....	28
5.4 Asbestos-related work.....	31
5.5 Disposing of asbestos or ACM.....	34
<b>6. MANAGING EXPOSURE TO ASBESTOS OR ACM .....</b>	<b>36</b>
6.1 Measuring the exposure standard.....	36
6.2 Health monitoring .....	36
6.3 Training workers about asbestos or ACM .....	38
6.4 Limited use of equipment .....	39
<b>7. CONTROLLING THE RISKS .....</b>	<b>40</b>
7.1 Removing asbestos.....	40
7.2 Enclosing asbestos .....	41
7.3 Encapsulation and sealing asbestos .....	41
7.4 Tools and equipment.....	43
7.5 Safe work practices .....	43
7.6 Personal protective equipment.....	44
7.7 Laundering clothing .....	45
7.8 Cleaning up .....	46
<b>APPENDIX A – SAMPLING PROCESS .....</b>	<b>47</b>
<b>APPENDIX B – EXAMPLES OF WARNING SIGNS AND LABELS.....</b>	<b>49</b>

<b>APPENDIX C – TEMPLATE OF AN ASBESTOS REGISTER.....</b>	<b>51</b>
<b>APPENDIX D – EXAMPLE OF AN ASBESTOS REGISTER.....</b>	<b>52</b>
<b>APPENDIX E – EXAMPLE OF ASBESTOS-RELATED WORK.....</b>	<b>53</b>
<b>APPENDIX F – RECOMMENDED SAFE WORKING PRACTICES.....</b>	<b>56</b>

## FOREWORD

---

**Please note:** Amendments have been made to this ACT publication of the *How to manage and control asbestos in the workplace code of practice* to ensure consistency with chapter 8 of the *Work Health and Safety Regulation 2011*.

This Code of Practice on how to manage and control asbestos in the workplace is an approved code of practice under section 274 of the *Work Health and Safety Act* (the WHS Act).

An approved code of practice is a practical guide to achieving the standards of health, safety and welfare required under the WHS Act and the Work Health and Safety Regulations (the WHS Regulations).

A code of practice applies to anyone who has a duty of care in the circumstances described in the code. In most cases, following an approved code of practice would achieve compliance with the health and safety duties in the WHS Act, in relation to the subject matter of the code. Like regulations, codes of practice deal with particular issues and do not cover all hazards or risks that may arise. The health and safety duties require duty holders to consider all risks associated with work, not only those for which regulations and codes of practice exist.

Codes of practice are admissible in court proceedings under the WHS Act and Regulations. Courts may regard a code of practice as evidence of what is known about a hazard, risk or control and may rely on the code in determining what is reasonably practicable in the circumstances to which the code relates.

The WHS Act and Regulations may be complied with by following another method, such as a technical or an industry standard, if it provides an equivalent or higher standard of work health and safety than the code.

An inspector may refer to an approved code of practice when issuing an improvement or prohibition notice.

This Code of Practice has been developed by Safe Work Australia as a model code of practice under the Council of Australian Governments' *Inter-Governmental Agreement for Regulatory and Operational Reform in Occupational Health and Safety* for adoption by the Commonwealth, state and territory governments.

A draft of this Code of Practice was released for public consultation on 7 December 2010 and was endorsed by the Workplace Relations Ministers' Council on 10 August 2011.

## SCOPE AND APPLICATION

---

This Code provides practical guidance for persons conducting a business or undertaking on how to manage risks associated with asbestos and asbestos containing material (ACM) at the workplace and thereby minimise the incidence of asbestos-related diseases such as mesothelioma, asbestosis and lung cancer.

This Code provides information on how to identify the presence of asbestos at the workplace and how to implement measures to eliminate or minimise the risk of exposure to airborne asbestos fibres.

In some cases, the most appropriate control measure determined may be to remove the asbestos. The *Code of Practice: How to Safely Remove Asbestos* provides further guidance for asbestos removalists so asbestos can be removed whilst eliminating, or where this is not possible, minimising the exposure of workers and other persons to airborne asbestos.

Other laws relating to matters such as environmental protection, public health, building and construction and local government regulation may apply in addition to the WHS Act and WHS Regulations.

Some chapters of this Code will apply to asbestos that is present in domestic premises when the premises becomes a workplace.

### ***How to use this Code of Practice***

In providing guidance, the word 'should' is used in this Code to indicate a recommended course of action, while 'may' is used to indicate an optional course of action.

This Code also includes various references to sections of the WHS Act and Regulations to provide context with legal requirements. These references are not exhaustive. The words 'must', 'requires' or 'mandatory' indicate that these legal requirements exist and must be complied with.

## 1. INTRODUCTION

---

### 1.1 WHAT ARE THE PROHIBITIONS ON ASBESTOS IN THE WORKPLACE?

**Regulation 419** A person conducting a business or undertaking must not carry out or direct or allow a worker to carry out work involving asbestos if that work involves manufacturing, supplying, transporting, storing, removing, using, installing, handling, treating, disposing of or disturbing asbestos or ACM, except in prescribed circumstances.

Note: The prohibition on the supply of asbestos also prohibits the sale of asbestos or ACM.

The final prohibition for asbestos in the workplace came into effect on 31 December 2003. These prohibitions do not apply if the work involving asbestos is any of the following:

- genuine research and analysis
- sampling and identification in accordance with the WHS Regulations
- maintenance of, or service work on, non-friable asbestos or ACM, fixed or installed before 31 December 2003, in accordance with the WHS Regulations
- removal or disposal of asbestos or ACM, including demolition, in accordance with the WHS Regulations
- transport and disposal of asbestos and asbestos waste in accordance with jurisdictional legislation
- demonstrations, education or practical training in relation to asbestos or ACM
- display, or preparation or maintenance for display, of an artefact or thing that is, or includes, asbestos or ACM
- management in accordance with the WHS Regulations of in-situ asbestos that was installed or fixed before 31 December 2003
- work that disturbs asbestos during mining operations that involve the extraction of or exploration for a mineral other than asbestos
- laundering asbestos-contaminated clothing in accordance with the WHS Regulations
- minor or routine maintenance work, or other minor work, in accordance with this regulation.
- where the regulator approves the method adopted for managing risk associated with asbestos.

Work involving asbestos-contaminated soil is not prohibited as long as a licensed asbestos assessor has determined the soil does not contain any visible ACM or friable asbestos. If friable asbestos is visible, it should not contain more than trace levels of asbestos determined in accordance with AS4964:2004 *Method for the qualitative identification of asbestos in bulk samples*.

The management of naturally occurring asbestos (NOA) that stays in its natural state is not prohibited if managed in accordance with an asbestos management plan.

Although the ultimate goal of this prohibition is for all workplaces to be free of asbestos, it is only when these materials are being replaced or where they present a health risk that non-asbestos alternatives must be used. Caution needs to be taken when working with buildings constructed prior to 1990 or newer buildings that may have used recycled materials and may have reinstated old plant containing ACM gaskets and/or linings.

If asbestos or ACM is identified in a workplace and demolition or refurbishment work is going to be carried out, the asbestos or ACM must be removed if it is likely to be disturbed before the work starts. If other maintenance or service work is to be carried out at the workplace, removal of asbestos should be considered as a control measure.

Where removal is not reasonably practicable, other control measures must be implemented to minimise exposure, including encapsulation or sealing.

In addition to the prohibition, there is also a restriction on who can remove asbestos. Asbestos removalists and their workers must be competent to carry out asbestos removal work and must be licensed. Further details on who can remove asbestos can be found in the WHS Regulations and the *Code of Practice: How to Safely Remove Asbestos*.

**Prohibitions on the import of plant and other materials that contain asbestos**

The importation of asbestos or materials containing asbestos into Australia is generally prohibited under the *Customs (Prohibited Imports) Regulations 1956* (Customs PI Regulations).

To complement the ban on the importation, manufacture and use of all forms of asbestos and asbestos-containing products from 31 December 2003, the import prohibition on asbestos under the Customs PI Regulations was also introduced.

If plant or other materials are imported from countries where asbestos is not yet prohibited, a quality assurance system should be put in place to ensure they do not contain asbestos prior to supplying or using it in the workplace.

Further information on importing asbestos or any other customs matter is available on the Customs website <<http://www.customs.gov.au>>.

**1.2 WHO HAS DUTIES TO MANAGE AND CONTROL ASBESTOS OR ACM?**

The WHS Act requires all persons who conduct a business or undertaking to ensure, so far as is reasonably practicable, that workers and other persons are not put at risk from work carried out as part of the business or undertaking. The WHS Regulations include specific obligations to manage and control asbestos and ACM at the workplace. These are summarised in the table below.

Duty holder	Responsibilities
Person conducting a business or undertaking (PCBU)	<p><b>Control risk of exposure</b></p> <ul style="list-style-type: none"> <li>• must ensure, so far as is reasonably practicable, that exposure of a person at the workplace to airborne asbestos is eliminated, except in an area that is enclosed to prevent the release of respirable asbestos fibres and negative pressure is used. If this is not reasonably practicable, the exposure must be minimised so far as is reasonably practicable</li> <li>• must ensure the exposure standard for asbestos is not exceeded at the workplace.</li> </ul> <p><b>Health monitoring</b></p> <ul style="list-style-type: none"> <li>• must ensure health monitoring is provided to a worker who is carrying out licensed removal work, other ongoing asbestos removal work or asbestos-related work and there is risk of exposure when carrying out that work</li> <li>• must ensure the health monitoring is carried out under the supervision of a registered medical practitioner and information as specified in the WHS Regulations is provided to that medical practitioner</li> <li>• must pay all expenses for health monitoring, obtain report and keep records of all health monitoring.</li> </ul> <p><b>Training and use of equipment</b></p> <ul style="list-style-type: none"> <li>• must ensure that information, training and instruction provided to a worker is suitable and adequate and that it is provided in a way that is readily understandable by any person to whom it is provided</li> <li>• must ensure that, if a worker is either carrying out asbestos-related work or may be involved in asbestos removal work, they are trained in the identification and</li> </ul>

Duty holder	Responsibilities
	<p>safe handling of asbestos and ACM and the suitable control measures</p> <ul style="list-style-type: none"> <li>for workers who carry out work where NOA is likely to be found, training must be provided on hazards and risks associated with NOA.</li> </ul> <p><b>Controlling the use of equipment</b></p> <ul style="list-style-type: none"> <li>must not use, or direct or allow a worker to use, certain equipment on asbestos and ACM.</li> </ul> <p><b>Asbestos-related work</b></p> <ul style="list-style-type: none"> <li>must, if there is uncertainty as to whether work is asbestos-related work, assume asbestos is present or arrange for an analysis of a sample to be undertaken to determine if asbestos or ACM is present</li> <li>must give information as specified in regulation 480 of the WHS Regulations to a person who is likely to be engaged to carry out asbestos-related work</li> <li>must ensure the asbestos-related work area is separated from other work areas at the workplace, signs are used to indicate where the asbestos-related work is being carried out and barricades are used to delineate the asbestos-related work area</li> <li>must ensure a licensed asbestos assessor carries out air monitoring of the work area if there is uncertainty as to whether the exposure standard is likely to be exceeded</li> <li>must ensure that decontamination facilities (including containers and labels labelled in accordance with the GHS) are available when asbestos-related work is being carried out</li> <li>must ensure that asbestos waste is contained and labelled in accordance with the GHS before it is removed, and is disposed of as soon as practicable</li> <li>must ensure, where personal protective equipment (PPE) is used and contaminated with asbestos, such PPE is sealed, decontaminated, labelled and disposed of in accordance with the WHS Regulations. If this is not reasonably practicable, the PPE must be laundered in accordance with the WHS Regulations. PPE that is not clothing and cannot be disposed of must be decontaminated and kept in a sealed container until it is reused for the purposes of asbestos-related work.</li> </ul>
PCBU with management or control of a workplace	<p><b>Identifying or assuming asbestos or ACM</b></p> <ul style="list-style-type: none"> <li>must ensure, so far as is reasonably practicable, that all asbestos or ACM at the workplace is identified by a licensed asbestos assessor or assume its presence</li> <li>may identify asbestos or ACM by arranging a sample of the material to be analysed.</li> </ul> <p><b>Indicating presence and location</b></p> <ul style="list-style-type: none"> <li>must ensure the presence and location of asbestos or ACM identified (or assumed to be identified) at the workplace is clearly indicated (by a label if reasonably practicable).</li> </ul> <p><b>Asbestos register</b></p> <ul style="list-style-type: none"> <li>must ensure an asbestos register is prepared, maintained, reviewed and kept at the workplace. It must be readily available to workers, their health and safety representatives and other persons</li> <li>must ensure, when management or control of the workplace is relinquished, a copy of the asbestos register is given to the person assuming management or control.</li> </ul> <p><b>Asbestos management plan</b></p> <ul style="list-style-type: none"> <li>must, where asbestos has been identified at the workplace, ensure an asbestos management plan is prepared, maintained and reviewed. It must be accessible to workers, their health and safety representatives and other persons.</li> </ul>

Duty holder	Responsibilities
	<p><b>Naturally Occurring Asbestos (NOA)</b></p> <ul style="list-style-type: none"> <li>• must manage the risks associated with NOA at the workplace and, where identified at the workplace or likely to be present, ensure that a written asbestos management plan is prepared, maintained and reviewed.</li> </ul> <p><b>Demolition and Refurbishment Work</b></p> <ul style="list-style-type: none"> <li>• prior to demolition or refurbishment work starting, must review the asbestos register and ensure all asbestos that is likely to be disturbed is identified and removed so far as is reasonably practicable</li> <li>• must provide a copy of the asbestos register to the person carrying out the demolition or refurbishment work before the work commences</li> <li>• must, if an emergency occurs and a structure or plant is to be demolished, ensure that before the demolition occurs there is a procedure to reduce the risk of exposure to asbestos to below the exposure standard and notify the regulator about the emergency.</li> </ul>
PCBU carrying out demolition or refurbishment work	<p><b>Demolition and Refurbishment Work</b></p> <ul style="list-style-type: none"> <li>• must, prior to the demolition or refurbishment work being carried out: <ul style="list-style-type: none"> <li>○ obtain a copy of the asbestos register for the workplace from the person with management or control before the work commences</li> <li>○ if an asbestos register is not available, ensure the structure or plant to be demolished or refurbished has been inspected by a licensed asbestos assessor to determine if any asbestos or ACM is fixed to or installed (or assume it's presence)</li> <li>○ where asbestos is determined to be fixed to or installed, tell the occupier, owner (if at a domestic premises) or the person with management or control in any other case</li> <li>○ ensure asbestos at domestic premises that is likely to be disturbed by the demolition or refurbishment is identified and, if reasonably practicable, removed before the work starts</li> <li>○ if an emergency occurs at domestic premises where asbestos is identified (or assumed) and it must be demolished, ensure there is a procedure to reduce the risk of the exposure to asbestos to below the exposure standard and notify the regulator about the emergency.</li> </ul> </li> </ul>

In some cases, there may be more than one person with management or control of a workplace. For example:

- a person with management of a workplace is a tenant
- a person with control of a workplace has the power to make decisions and changes to the structure and use of the workplace. This person will usually be the owner of the workplace or a representative of the owner and may:
  - own the workplace and engage workers to carry out work there
  - own the workplace but lease it to another person conducting a business or undertaking at the workplace
  - have management or control over the workplace, for example a property management group or agent.

### 1.3 THE MEANING OF KEY TERMS

**Airborne asbestos** means any fibres of asbestos small enough to be made airborne. For the purposes of monitoring airborne asbestos fibres, only respirable fibres are counted.

**approved warning sign**—see the *Dangerous Substances (General) Regulation 2004*, section 338.

**Asbestos** means the asbestiform varieties of mineral silicates belonging to the serpentine or amphibole groups of rock-forming minerals, including actinolite asbestos, grunerite (or amosite) asbestos (brown), anthophyllite asbestos, chrysotile asbestos (white), crocidolite asbestos (blue) and tremolite asbestos.

**Asbestos Assessor** means a person who holds an asbestos assessor licence.

**Asbestos containing material (ACM)** means any material or thing that, as part of its design, contains asbestos.

**Asbestos-contaminated dust or debris (ACD)** means dust or debris that has settled within a workplace and is (or assumed to be) contaminated with asbestos.

**Asbestos-related work** means work involving asbestos (other than asbestos removal work to which Part 8.7 of the WHS Regulations applies) that is permitted under the exceptions set out in regulation 419(3), (4) and (5).

**Asbestos removalist** means a person conducting a business or undertaking who carries out asbestos removal work.

**Asbestos removal work** means:

- work involving the removal of asbestos or ACM
- Class A asbestos removal work or Class B asbestos removal work as outlined in Part 8.10 of the WHS Regulations.

**Exposure standard** for asbestos is a respirable fibre level of 0.1 fibres/ml of air measured in a person's breathing zone and expressed as a time weighted average fibre concentration calculated over an eight-hour working day and measured over a minimum period of four hours in accordance with:

- the Membrane Filter Method
- a method determined by the relevant regulator.

**Friable asbestos** means material that is in a powder form or that can be crumbled, pulverised or reduced to a powder by hand pressure when dry, and contains asbestos.

**GHS** means *Globally Harmonised System of Classification and Labelling of Chemicals*.

**In-situ asbestos** means asbestos or ACM fixed or installed in a structure, equipment or plant but does not include naturally occurring asbestos.

**NATA-accredited laboratory** means a testing laboratory accredited by the National Association of Testing Authorities (NATA), Australia, or recognised by NATA either solely or with someone else.

**Naturally occurring asbestos (NOA)** means the natural geological occurrence of asbestos minerals found in association with geological deposits including rock, sediment or soil.

**Non-friable asbestos** means material containing asbestos that is not friable asbestos, including material containing asbestos fibres reinforced with a bonding compound.

**Respirable asbestos** means an asbestos fibre that:

- is less than 3 microns ( $\mu\text{m}$ ) wide
- is more than 5 microns ( $\mu\text{m}$ ) long
- has a length to width ratio of more than 3:1.

## 2. MANAGING RISKS ASSOCIATED WITH ASBESTOS AND ACM

---

### 2.1 WHAT IS INVOLVED IN MANAGING RISKS?

**Regulation 420** A person conducting a business or undertaking must ensure, so far as is reasonably practicable, exposure of a person at the workplace to airborne asbestos is eliminated. If this is not reasonably practicable, the exposure must be minimised so far as is reasonably practicable.

The exposure standard for asbestos must not be exceeded at the workplace.

Managing the risks associated with asbestos involves:

- identifying asbestos and ACM at the workplace and recording this in the asbestos register
- assessing the risk of exposure to airborne asbestos
- eliminating or minimising the risks by implementing control measures
- reviewing control measures to ensure they are effective.

When choosing the most appropriate control measure, the following hierarchy of controls must be considered:

- eliminating the risk (for example, removing the asbestos)
- substituting the risk, isolating the risk or applying engineering controls (for example, enclosing, encapsulation, sealing or using certain tools)
- using administrative controls (for example, safe work practices)
- using PPE.

A combination of these controls may be required in order to adequately manage and control asbestos or ACM. Chapter 7 of this Code provides more information on the different control measures that can be used.

General guidance on the risk management process is available in the *Code of Practice: How to Manage Work Health and Safety Risks*.

#### **Consulting your workers**

**Section 47** The WHS Act requires the person conducting a business or undertaking to consult, so far as is reasonably practicable, with workers who carry out work who are (or are likely to be) directly affected by a work health and safety matter.

**Section 48** If the workers are represented by a health and safety representative, the consultation must involve that representative.

Consultation with workers and their health and safety representatives is a critical part of managing work health and safety risks.

Consulting with and involving workers in the identification and safe handling of asbestos can assist in ensuring that safety instructions and safe work practices are complied with.

Health and safety representatives must have access to relevant information on matters that can affect the health and safety of workers, for example asbestos exposure data and the asbestos register.

## ***Consulting, cooperating and coordinating activities with other duty holders***

**Section 46** The WHS Act requires that persons conducting a business or undertaking consult, cooperate and coordinate activities with all other persons who have a work health or safety duty in relation to the same matter, so far as is reasonably practicable.

Sometimes there may be other businesses that are involved in the same activities or share the same workplace. For example:

The owner of an arcade is renovating one of the shops for a new tenant to move into. The building owner has engaged a number of contractors to carry out the renovation work including demolishing a wall. The building owner has management and control over the workplace and is responsible for ensuring the current asbestos register is updated due to the work that is being carried out. The building owner consults other tenants that may be impacted by the renovation work on the identification of asbestos and what will need to be done if asbestos is disturbed. As the work begins, the building owner, contractors and tenants all co-operate with each other and co-ordinate their activities to protect any persons from potential exposure to asbestos.

Further guidance on consultation is available in the *Code of Practice: Work Health and Safety Consultation, Cooperation and Coordination*.

## **2.2 IDENTIFYING IF ASBESTOS OR ACM IS AT THE WORKPLACE**

This section does not apply to naturally occurring asbestos (NOA).

**Regulation 422** A person with management or control of a workplace must ensure asbestos or ACM at the workplace is identified by a licensed asbestos assessor.

Identifying asbestos or ACM is the first step in managing the risk of exposure to asbestos in the workplace. As there may be more than one person in the workplace responsible for this duty, it is important that all duty holders consult, cooperate and coordinate with each other as well as consulting with workers and health and safety representatives, for example the person with control of the workplace may carry out the task of identifying asbestos with the person who has day-to-day management of the workplace to ensure it has been done accurately.

If the person with management or control of the workplace assumes that asbestos or ACM is present, or if they have reasonable grounds to believe that asbestos is not present, a licensed asbestos assessor does not need to be engaged to make this decision.

### ***Factors to consider when identifying asbestos***

The licensed asbestos assessor carrying out the task of identifying asbestos should have all relevant information so they can correctly identify where asbestos is located in the workplace: for example, obtaining information on the products used in making the building, structure or plant, including building plans, design specifications, and correspondence with builders and plant manufacturers. The assessor may also consult with workers at the workplace about the location of asbestos.

There are a number of factors that may be taken into account to identify or assume that asbestos is present in a workplace. These include:

<b>When was the building constructed?</b>	Asbestos was widely used as construction and insulation material in buildings until the late 1980s when bans on its manufacture and use were put in place. However, the use of asbestos was only completely prohibited on 31 December 2003. As the bans were not absolute prior to 2003 and building materials may have been stockpiled, stored, or recycled and used, it is possible that asbestos may be present in buildings that were constructed up to 31 December 2003 and possibly later.
<b>Were there any refurbishments or additions to the building prior to 31 December 2003?</b>	Any refurbishment or extensions to the original building prior to 1990 and potentially up to 31 December 2003 may have involved the use of asbestos. Even if the original parts of the building did not contain asbestos, it should not be assumed that subsequent additions have no asbestos.
<b>What type of material was used to construct the building?</b>	The main construction materials used are made from timber, brick, steel and cement sheet. If cement sheet is present and was installed up until 1990, it is likely to contain asbestos bonded to the cement particles. For example, a roof made from corrugated cement sheeting is likely to contain asbestos. Areas of buildings that are prone to wet conditions may contain asbestos in the walls and floors due to its hardness and waterproofing qualities compared to other materials. For example, bathrooms, toilets and laundries may have asbestos sheeting or vinyl tiles. Likewise, pipes throughout the building that carry water and sewage may also contain asbestos.
<b>Talk to designers, manufacturers or suppliers of plant, or refer to design plans</b>	Asbestos may be present in specific parts of the plant in a workplace as it was used in gasket and friction brake products. Despite a large reduction in its use, chrysotile asbestos was still being used in some specific applications until recent years, including rotary vane vacuum pumps and in gaskets for certain types of equipment. If there is plant that was designed, built and installed prior to 1 January 2004, the supplier, manufacturer or designer of the plant should be consulted to find out if asbestos is present and, if possible, obtain this advice in writing. If this is not possible, review the design plans and seek advice from an experienced engineer or plant designer. Quality assurance systems or checks should be in place to confirm whether asbestos is present.
<b>Talk to workers who have worked at the workplace for a long time</b>	Speaking with experienced workers will assist in the identification process as they may be aware of the history of the building, including its age, construction, renovation or repairs, and may know where asbestos is located in the workplace.
<b>Visually inspect the workplace to identify asbestos, ACM and inaccessible areas</b>	<p>A thorough inspection of all areas of the workplace must be conducted by the licensed asbestos assessor, including all buildings, structures, ceiling spaces, cellars, shafts, storage areas and wall cavities.</p> <p>Material needs to be considered to contain asbestos unless proven otherwise if:</p> <ul style="list-style-type: none"> <li>• it cannot be identified</li> <li>• there is uncertainty as to whether it contains asbestos</li> <li>• it is inaccessible.</li> </ul> <p>The design plans for a building, structure, ship or plant may assist in identifying inaccessible areas, as would discussion with builders, architects, manufacturers of plant and maintenance workers. Knowledge of materials used in the construction of the building or experience and findings from inspections of similar sections of the building (or similar buildings) may also assist.</p>
<b>Take notes and photographs</b>	Taking notes and photographs while the inspection is being conducted can assist in producing the asbestos register.

## 2.3 ASSUMING ASBESTOS OR ACM IS PRESENT

This section does not apply to NOA.

**Regulation 422** A person with management or control of a workplace must:

- assume the material is asbestos or ACM if it cannot be identified but a licensed asbestos assessor reasonably believes it is asbestos or ACM;
- assume asbestos is present if part of the workplace is inaccessible and it is likely to contain asbestos or ACM; and
- assume asbestos is present if the workplace is residential premises and an approved warning sign is displayed at the residential premises.

It is not necessary to engage a licensed asbestos assessor to identify asbestos if the person with management or control of the workplace assumes that asbestos is present or if that person has reasonable grounds to believe that asbestos is not present.

If there is uncertainty as to whether asbestos is present in any part of a structure or plant, the person with management or control of the workplace can either assume asbestos is present and treat it with appropriate caution based on the level of risk or have a sample analysed. If it is assumed to be asbestos, it is considered to be asbestos for legal purposes. There is no need to take a sample for analysis and identification in all circumstances. This means the suspect material can remain undisturbed and the time and cost of sampling and analysis is avoided.

The person with management or control of a workplace can assume asbestos or ACM is not present as long as this assumption is based on reasonable grounds, which may include:

- a workplace is constructed post 1990 and there is no plant or equipment made prior to 2004
- pre-2004 buildings where the building is constructed (including the roof) wholly of metal, brick or concrete, and has no internal walls that are made of fibro, gyprock or similar cladding, for instance a corrugated iron shed or a colourbond type warehouse building constructed of double brick with bare brick internally. Flooring (vinyl tiles), switchboards and under eaves lining should also be considered
- where a register indicates that all the identified and assumed asbestos has been removed.

Once the presence and location of asbestos has been assumed:

- all requirements for managing asbestos must be followed until the material is removed or testing has confirmed that it is not or does not contain asbestos
- the workplace asbestos register must include all the presumptions made about materials in the workplace with a simple, generic statement such as, '*Roof sheeting is presumed to contain asbestos*' or '*All underground conduits are presumed to contain asbestos.*'

### ***Inaccessible areas***

If there are inaccessible areas in the workplace that are likely to have asbestos or ACM, it must be assumed they contain asbestos until they are accessed and it is determined whether asbestos is present or not.

As a general rule, an inaccessible area is an area that cannot be accessed during normal daily activities or routine maintenance. The following areas are not regarded as 'inaccessible areas' and must be inspected or assumed to contain asbestos:

- locked rooms
- crawl spaces
- basement and cellars

- storage areas
- ceiling spaces
- fire doors
- locked security safes.

Accessing fire door and security safe cores to determine whether they contain asbestos may create a risk, for example drilling can result in the release of airborne asbestos. If this is the case, cores should not be accessed and must be assumed to contain asbestos until otherwise proven (for instance, during maintenance when access is obtained) or information is obtained from the supplier. Fire doors may have a compliance tag on the door jamb stating the fire rating and a compliance date. This can provide an indication of whether the door is likely to contain asbestos.

*Examples of inaccessible areas that may contain asbestos or ACM are:*

- a cavity in a building that is completely (or almost completely) enclosed and suspected of containing asbestos (based on where asbestos is located elsewhere in the building) and access is only possible through destruction of part of the walls of the cavity
- the inner lining of an old boiler pressure vessel (information on this type of vessel suggests it contains asbestos) and the inner lining is not accessible due to the design and operation of the boiler and access can only be via partial destruction of the outer layer
- vinyl tiles that may contain asbestos, which have had a number of layers of non-ACM placed over them and secured, where the layers above it have been well secured and require some form of destruction in order to access the vinyl that may contain asbestos
- enclosed riser shafts in multi-storey buildings containing cables that may be insulated with ACM
- air-conditioning ducts that may contain asbestos gaskets and linings.

## 2.4 RISK ASSESSMENT IF FRIABLE ASBESTOS IS IDENTIFIED OR ASSUMED AT A WORKPLACE

### **Regulation 422A** Asbestos Risk Assessment

If friable asbestos is identified or assumed to be present, the person with management or control of the workplace must ensure that:

- a risk assessment is made (and provided in writing) of the risks associated with the asbestos at the workplace;
- the risk assessment must be undertaken by a licensed asbestos assessor;
- the risk assessment for friable asbestos must take into account:
  - a. the condition of the asbestos;
  - b. the likelihood of anyone being exposed to the product;
  - c. whether the nature or location of any work to be carried out is likely to disturb the asbestos; and
  - d. the result of any air monitoring at the workplace.
- The risk assessment for friable asbestos must also set out the control measures considered for control or risks associated with asbestos;
- Subject to section 421(1), the details of risk assessment must be included in:
  - a. the asbestos management plan for the workplace; and
  - b. the asbestos register for the workplace.

This requirement is unique to the ACT however it is considered an integral part of effective asbestos safety management.

This provision calls upon the expertise of a licensed asbestos assessor to advise the person with management or control of the workplace what control measures should be put in place to prevent airborne fibres and possible exposure from occurring.

Including this information in both the asbestos register and the asbestos management plan for the workplace will ensure that persons conducting a business or undertaking at the workplace are aware to the risks of exposure.

**Regulation 422B** Asbestos Risk Assessment - Review

The person with management or control of the workplace must ensure that a risk assessment required under regulation 422A is reviewed by a licensed asbestos assessor if any of the following apply:

- there is evidence of which the person is, or should be, aware that:
  - a. the risk assessment is no longer valid or adequate;
  - b. that the control measures set out in the risk assessment are no longer valid or adequate;
- a significant change is proposed for the premises, or for work practices or procedures, relevant to the risk assessment; or
- there is a change in the condition of the product.

As with the previous regulation, this is unique to the ACT and builds upon the requirement in 422A.

## 2.5 ARRANGING A SAMPLE TO IDENTIFY ASBESTOS

This section does not apply to NOA.

**Regulation 423** A person with management or control of a workplace may identify asbestos or ACM by arranging for a licensed asbestos assessor to inspect and take a sample of material at the workplace to be analysed for the presence of asbestos or ACM.

A sample must only be analysed by:

- a NATA-accredited laboratory accredited for the relevant test method
- a laboratory approved by the regulator, or
- a laboratory operated by the regulator.

It can be difficult to tell whether a material contains asbestos simply by looking at it, unless it is labelled. If a material has been imported from overseas, it may not be labelled as containing asbestos or it may only be labelled if the materials contain more than 10% asbestos. Therefore, a sample should be taken and analysed unless the decision was made to assume it is asbestos.

Only a licensed asbestos assessor may take the samples for analysis because of the increased health risk of fibres being released during the process. If the sampling process is conducted incorrectly, it can be more hazardous than leaving the material alone. All asbestos samples must be analysed by a NATA-accredited laboratory or one that is approved or operated by the relevant regulator. Any sample taken should be sealed within a container, or a 200 µm polythene bag, and appropriately labelled.

Once the results of the sampling are known, the person with management or control of the workplace must ensure the asbestos register is updated indicate that the material is asbestos or is assumed to be.

If asbestos is stable, non-friable and will not be disturbed, it should be left alone. Only material that is damaged or will be disturbed should be sampled. If the material may contain asbestos and it is decided not to take samples, an assumption must be made that the material contains asbestos.

Appendix A provides a procedure that a licensed asbestos assessor can follow when undertaking sampling.

## 2.6 INDICATING THE PRESENCE OF ASBESTOS IN THE WORKPLACE


This section does not apply to NOA.

**Regulation 424** A person with management or control of a workplace must ensure the presence and location of asbestos or ACM identified at the workplace is clearly indicated. If reasonably practicable, the asbestos or ACM must be indicated by a label.

All asbestos identified by a licensed asbestos assessor or assumed asbestos, including where the asbestos is inaccessible, must be clearly indicated. If it is reasonably practicable, labels must be used to identify the material as containing asbestos. However, signs may be more appropriate to use.

Examples of labels or signs that can be used to indicate the location or presence of asbestos or ACM are shown at Appendix B. These examples provide an indication of the words that may be used—these words are not mandatory.

In the ACT, all loose fill asbestos affected homes must have a warning label. It looks like this:

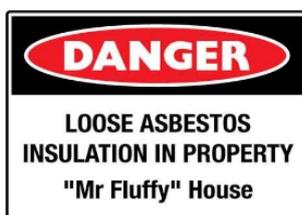

### **Labels**

If labels can be used, a licensed asbestos assessor should determine the number and positions of the labels required. The location of labels should be consistent with the location listed in the asbestos register.

If a risk assessment suggests asbestos may be disturbed or people are likely to be exposed and it is not reasonably practicable to label asbestos directly, a prominent warning sign must be posted in its immediate vicinity. For example, if floor tiles have been identified as containing asbestos, an appropriate warning sign may be displayed on an adjacent wall.

### **Warning signs**

Examples of asbestos warning signs are in Appendix B.

Any areas of a workplace that contain asbestos, including plant, equipment and components, should be signposted with warning signs to ensure the asbestos is not unknowingly disturbed without the correct precautions being taken. These signs should be weatherproof, constructed of light-weight material and adequately secured. Signs should be placed at all the main entrances to the work areas where asbestos is present.

Where direct marking of asbestos is not possible, identifying the presence and location of asbestos to workers such as plumbers, electricians and carpenters before they commence work may be achieved by implementing a permit-to-work system. The presence and location of the asbestos should be entered on site plans and the asbestos register and be accessible to all workers to ensure they are aware of the presence of asbestos.

## 2.7 ASSESSING THE RISK OF EXPOSURE

This section does not apply to NOA. A licensed asbestos assessor can assess the risk of exposure to asbestos and prepare a written report.

If asbestos or ACM is in good condition and left undisturbed, it is unlikely that airborne asbestos will be released into the air and the risk to health is extremely low. It is usually safer to leave it and review its condition over time. However, if the asbestos or ACM has deteriorated, has been disturbed, or if asbestos-contaminated dust is present, the likelihood that airborne asbestos will be released into the air is increased.

The type of material that binds asbestos fibres will influence the potential for airborne asbestos to be released into the air from different asbestos or ACM. For example, a loosely bound sprayed (or limpet) coating is more likely to release fibres when disturbed than asbestos cement in which fibres are firmly bound.

The following list ranks different types of asbestos according to the likelihood that airborne asbestos can be released into the air if it has deteriorated or been disturbed. The potential risk to health is greater for items higher up the list if people are exposed to airborne asbestos, but any of the materials listed can produce asbestos fibres if they are disturbed.



When deciding if there is a risk to health from asbestos, a licensed asbestos assessor will consider whether the asbestos or ACM is:

- in poor condition
- likely to be further damaged or to deteriorate
- likely to be disturbed due to work practices carried out in the workplace (for example, routine and maintenance activities and their frequency)
- in an area where workers are exposed to the material.

The licensed asbestos assessor will undertake a visual inspection of the material, its location and analyse the work practices at the workplace to make this assessment.

Asbestos-related work activities (including maintenance) plus unusual and infrequent activities (such as emergency activities) will be considered. The assessor will also take into account the proximity of the asbestos or ACM to where employees work, as this can affect the potential for exposure if asbestos fibres become airborne.

The following are examples of activities that could pose a risk to health:

- Forklifts driving adjacent to asbestos cement (AC) sheet walls may damage these sheets from accidental impacts during the course of work.
- Plumbers working on a long pipe that does not have asbestos insulation where the work is being done may cause disturbance to asbestos-containing insulation on the pipe some metres away.
- Electricians wiring in a ceiling space sprayed with material containing friable asbestos may disturb this material.
- Acid fumes from an acid bath located next to an asbestos cement wall and below an asbestos cement roof may cause deterioration of the asbestos material over time.

### 3. ASBESTOS REGISTER

---

This chapter does not apply to domestic premises or NOA.

**Regulation 425** A person with management or control of a workplace must ensure an asbestos register is prepared and kept at the workplace. The asbestos register must be maintained, to ensure the information in the register is up-to-date.

*Note: An asbestos register is not required to be prepared when:*

- *the workplace is a building that was constructed after 31 December 2003, and*
- *no asbestos has been identified at the workplace, and*
- *no asbestos is likely to be present at the workplace from time to time.*

#### 3.1 WHAT IS AN ASBESTOS REGISTER?

The asbestos register is a document that lists all asbestos identified by a licensed asbestos assessor (or assumed) to be present in a workplace. The asbestos register must:

- record any asbestos or ACM that has been identified by an assessor or is likely to be present at the workplace from time to time. This would include:
  - the date on which the asbestos or ACM was identified
  - the location, type and condition of the asbestos; or
- state that no asbestos or ACM is identified by an assessor at the workplace if the person knows that no asbestos or ACM is identified or is likely to be present from time to time at the workplace.
- If a risk assessment is made for the workplace under section 422A, the asbestos register must include the risk assessment.

Appendix C provides a template of an asbestos register, while Appendix D provides an example of how it should be completed.

A comprehensive asbestos register may also include:

- details of any asbestos assumed to be in the workplace
- results of any analysis that confirms a material at the workplace is or is not asbestos
- dates when the identification by an assessor was carried out
- details of inaccessible areas
- the name of the licensed asbestos assessor.

It may also be useful to attach photographs or drawings to visually show the location of the asbestos or ACM in the workplace.

#### ***What if an asbestos register already exists at the workplace?***

If an asbestos register already exists at the workplace there is no need to create another one. The existing register can be reviewed and revised to include the results of an inspection by a licensed asbestos assessor.

Persons conducting a business or undertaking who are carrying out or intend to carry out work at a workplace, should obtain the current asbestos register to inform themselves and their workers of any asbestos or ACM that they have management or control of (for example, asbestos in items of plant).

If workers consider that the work they are about to do will disturb asbestos, they should talk to the person with management and control of the workplace or their health and safety representative.

### ***Where asbestos is only temporarily in the workplace***

In some cases it may not be necessary to include asbestos or ACM that is only temporarily present in the workplace. For example, if plant that contains asbestos is being repaired at the workplace but it is only there for a short period while being repaired, it does not need to be recorded in the asbestos register. However, if plant is often at the workplace (for example, where the company specialises in repairing plant that typically contains asbestos), it would be important to include this in the asbestos register. Note that where work involving asbestos is carried out, there are requirements to ensure the safety of the worker.

### ***Where there is no asbestos register at the workplace***

An asbestos register is not required if a workplace has been constructed after 31 December 2003 or if no asbestos has been identified.

If there is no asbestos register at the workplace but asbestos is encountered during the course of any work being carried out, the person with management or control of the workplace must engage a licensed asbestos assessor to confirm its identity and prepare a register.

As there will be no asbestos register at a domestic premise, the homeowner or landlord must be advised if asbestos is identified and appropriate action taken.

## **3.2 REVIEWING AND REVISING AN ASBESTOS REGISTER**

**Regulation 426** A person with management or control of a workplace must ensure an asbestos register is reviewed and where necessary revised by a licensed asbestos assessor if:

- the asbestos management plan is reviewed
- further asbestos or ACM is identified at the workplace, or
- asbestos is removed from or disturbed, sealed or enclosed at the workplace.

The register should be reviewed at least once every five years to ensure it is kept up-to-date.

When reviewing the asbestos register, the person should carry out a visual inspection of the asbestos and ACM listed to determine its condition and revise the asbestos register as appropriate. Previous asbestos registers and records relating to asbestos removal jobs, for instance clearance certificates, can assist in identifying all asbestos and ACM in the workplace.

## **3.3 ACCESSING AN ASBESTOS REGISTER**

**Regulation 427** The person with management or control of the workplace must ensure the asbestos register is readily accessible to:

- a worker who has carried out, carries out or intends to carry out work at the workplace
- health and safety representatives who represent workers that carry out or intend to carry out work at the workplace
- a person conducting a business or undertaking who has carried out, carries out or intends to carry out work at the workplace, and
- a person conducting a business or undertaking who has required, requires or intends to require work to be carried out at the workplace.

Where work is being carried out or is about to be carried out at the workplace by a person conducting a business or undertaking and that work involves a risk of exposure to airborne

asbestos, the person with management or control of the workplace must provide a copy of the asbestos register to that person.

A copy of the asbestos register should be kept at the workplace to ensure it is accessible.

### 3.4 TRANSFERRING AN ASBESTOS REGISTER

**Regulation 428** If the person with management or control of a workplace plans to relinquish management or control (for instance, selling the workplace or the business or undertaking), they must ensure, so far as is reasonably practicable, that a copy of the asbestos register is given to the person who is assuming management or control of the workplace.

## 4. ASBESTOS MANAGEMENT PLAN

**Regulation 429** A person with management or control of a workplace must ensure a written asbestos management plan is prepared for the workplace if asbestos or ACM has been identified by a licensed asbestos assessor or assumed present, or is likely to be present from time to time at the workplace.

The asbestos management plan must be maintained to ensure the information is up-to-date.

This requirement does not apply to domestic premises.

### 4.1 WHAT IS AN ASBESTOS MANAGEMENT PLAN?

An asbestos management plan sets out how asbestos or ACM that is identified at the workplace will be managed, for example what, when and how it is going to be done.

An asbestos management plan must include:

- if a risk assessment is made for the workplace under section 422A, the asbestos register must include the risk assessment
- the identification of asbestos and ACM, for example a reference or link to the asbestos register for the workplace, and the locations of signs and labels
- any management advice of a licensed asbestos assessor
- decisions, and reasons for the decisions, about the management of asbestos at the workplace, for example safe work procedures and control measures
- procedures for detailing accidents, incidents or emergencies of asbestos at the workplace
- workers carrying out work involving asbestos, for example consultation, information and training responsibilities.

Other information that may be included in the asbestos management plan is:

- an outline of how asbestos risks will be controlled, including consideration of appropriate control measures, as recommended by a licensed asbestos assessor
- a timetable for managing risks of exposure, for example priorities and dates for any reviews, circumstances and activities that could affect the timing of action
- identification of each person with responsibilities under the asbestos management plan and the person's responsibilities
- procedures, including a timetable for reviewing and, if necessary, revising the asbestos management plan and asbestos register
- air monitoring procedures at the workplace, if advised by a licensed asbestos assessor.

### 4.2 REVIEWING AN ASBESTOS MANAGEMENT PLAN

**Regulation 430** The person with management or control of the workplace must ensure the asbestos management plan is reviewed and, if necessary, revised at least once every five years or when:

- there is a review of the asbestos register or a control measure
- asbestos is removed from or disturbed, sealed or enclosed at the workplace
- the plan is no longer adequate for managing asbestos or ACM at the workplace
- a health and safety representative requests a review if they reasonably believe that any of the matters listed in the above points affects or may affect the health and safety of a member of their work group and the asbestos management plan was not adequately reviewed.

### 4.3 ACCESSING AN ASBESTOS MANAGEMENT PLAN

**Regulation 429** The person with management or control of the workplace must ensure the asbestos management plan is readily accessible to:

- a worker who has carried out, carries out or intends to carry out work at the workplace
- health and safety representatives who represent workers that carry out or intend to carry out work at the workplace
- a person conducting a business or undertaking who has carried out, carries out or intends to carry out work at the workplace, and
- a person conducting a business or undertaking who has required, requires or intends to require work to be carried out at the workplace.

The asbestos management plan should be kept at the workplace to ensure it is accessible.

## 5. MANAGING OTHER ASBESTOS-RELATED RISKS

---

### 5.1 NATURALLY OCCURRING ASBESTOS

**Regulation 431-434** A person with management or control of a workplace must manage the risks associated with naturally occurring asbestos (NOA) at the workplace.

If NOA is identified at the workplace or is likely to be present from time to time, a written asbestos management plan must be prepared and maintained to ensure the information is up-to-date.

#### ***What is NOA?***

In the majority of workplaces, the asbestos that is encountered and poses a risk to health and safety will be found in manufactured products. However, some workplaces may have to deal with asbestos in its natural state. NOA may be encountered in road building, site and construction work, and other excavation activities. Asbestos may occur in veins within rock formations.

#### ***Requirements to manage NOA***

Due to the difficulties in fully describing the location and extent of a NOA deposit in an asbestos register, there is no requirement for NOA be listed in an asbestos register. However, any NOA identified by a licensed asbestos assessor or assumed at a workplace must be included on the asbestos management plan for the workplace or be the subject of a new asbestos management plan. This is to ensure steps are put in place, as with all other asbestos encountered in workplaces, to ensure that risks of exposure from NOA are assessed and managed.

#### ***Preparing an asbestos management plan for NOA***

When preparing an asbestos management plan for NOA, the following should be considered:

- isolating the workplace or part of the workplace until controls are in place
- deviating excavation to ensure avoidance of the deposit, where possible
- using sealed excavation or mining equipment (air-conditioned cabins with filtered air)
- maintaining regular surveillance of the rock by a licensed asbestos assessor to ensure minimal disturbance of suspected fibrous minerals
- developing procedures for the safe disposal of asbestos waste, if required
- educating the workers in safe work practices.

Information on the contents, review and accessibility of the asbestos management plan can be found in Chapter 4 of this Code.

#### ***Managing NOA***

Ongoing management of NOA may be determined with the aid of an air monitoring program to assess asbestos exposure levels and specific risk control measures. A licensed asbestos assessor can advise on, and must carry out, this air monitoring.

The person with management or control of a workplace must ensure the release of airborne asbestos is minimised. This can be done by:

- wetting surfaces to reduce the dust levels
- suppressing, containing and extracting dust in processing operations (water sprays or local exhaust at transfer points and vibrating screens)
- using wet drilling or other approved in-hole dust suppression
- preventing the spread of contamination by using wash down facilities

- providing information to and training and supervision of all workers potentially at risk
- using PPE where indicated.

### ***Training of workers***

Training on the hazards and risks associated with NOA must be provided to workers who carry out work where NOA is found. Section 6.3 of this Code provides further information on training workers about asbestos.

## **5.2 CONTAMINATED SITES**

Sites contaminated with asbestos become a workplace when work is carried out there. The WHS Regulations require that, where asbestos is identified by a licensed asbestos assessor as contaminating a workplace, a register and asbestos management plan be created for the site.

The management and remediation of sites contaminated with asbestos from illegal dumping and demolition is a specialised task. In some instances, site remediation may entail removal of asbestos and ACM from the site; in other cases this may not be practicable, and other management strategies should be used. Engaging specialists who may include asbestos removalists is highly recommended for all but the most minor of non-friable contaminations.

The *Assessment of Site Contamination National Environmental Protection Measure* (NEPM) <<http://www.ephc.gov.au/contam>> sets out the general principles for assessment and remediation of sites contaminated with a number of hazardous materials including asbestos. It is recommended that a person conducting a business or undertaking who has a workplace that is, or is suspected of being, contaminated with asbestos should engage a licensed asbestos assessor.

## **5.3 DEMOLITION AND REFURBISHMENT WORK**

This section applies to the demolition or refurbishment of a structure or plant constructed or installed before 31 December 2003.

**Regulation 447-457** Prior to any demolition or refurbishment work being carried out, a person with management and control of a workplace must:

- review the asbestos register
- provide a copy of the asbestos register to the person carrying out the demolition or refurbishment work, and
- ensure asbestos that is likely to be disturbed is identified by a licensed asbestos assessor and, so far as is reasonably practicable, removed.

The person conducting a business or undertaking who will carry out demolition or refurbishment at a workplace must obtain a copy of the asbestos register before they commence the work.

Examples of demolition may include:

- complete dismantling of a decommissioned industrial plant
- total destruction of a building or part of a building
- total destruction of an old boiler for the purpose of disposal.

Examples of refurbishment may include the partial dismantling of:

- a boiler for the purpose of cleaning and repairing
- large plant in order to access and remove asbestos-containing gaskets for the purpose of replacement with non-asbestos-containing gaskets
- a building by removing sections of an asbestos cement roof
- part of a building for the purpose of renovation.

Demolition and refurbishment work does not include minor routine maintenance work, or other minor work.

- Minor maintenance work includes routine work that is small scale, often short in duration and may be unscheduled. This work may require the partial dismantling of a structure or plant and may include the removal of asbestos or ACM such as gaskets or brake components, for example a piece of plant to remove an asbestos-containing gasket, a passenger lift or press machine to remove an asbestos-containing brake component, or a piece of plant for the purpose of cleaning or repair.
- Minor work includes small tasks that are of short duration, such as cutting a small hole or hand-drilling up to a few holes in an AC sheet. It is not routine or regular such as planned maintenance. It is incidental work that can be done quickly and safely within minimal control measures required to ensure safety. Examples include cutting a small hole into an asbestos-containing eave to install a cable, removal of an asbestos-containing vinyl tile to install a plumbing fixture, or hand-drilling a few holes into an AC sheet to attach a fitting.

### ***Reviewing the asbestos register***

When reviewing the asbestos register, the person with management or control of the workplace or plant should consider the following questions:

- Where is the asbestos located in relation to the proposed demolition or refurbishment?
- Are there any inaccessible areas that are likely to contain asbestos and that will be disturbed as a result of the demolition or refurbishment?
- What is the type and condition of the asbestos?
- What is the quantity of asbestos?
- What is the method of demolition or refurbishment and how will it affect the ACM?
- If the asbestos will be disturbed during the demolition or refurbishment, can it be removed safely before work commences and how can this be done?

### ***What to do if the asbestos register indicates that asbestos is present***

If the asbestos register lists asbestos or ACM, the person with management or control of the workplace must ensure all asbestos likely to be disturbed is identified by a licensed asbestos assessor and removed by a licensed asbestos removalist, so far as is reasonably practicable, before the demolition or refurbishment work starts.

The WHS Regulations allow for the demolition of part of a structure or plant in order to access in-situ asbestos so it can be removed. For example, part of a wall may be demolished to access asbestos located in the wall cavity so it can be removed prior to further demolition.

For demolition work, if an emergency occurs, the person with management or control of the workplace must ensure a procedure is developed before the demolition work starts. The procedure must outline how to minimise the risk of exposure of workers and persons in the vicinity of the demolition site and ensure the exposure standard is not exceeded, so far as is reasonably practicable. The person must also provide the regulator with written notice of the emergency immediately after they become aware of the emergency and before the demolition starts.

*Note: An emergency can occur if a building, structure or plant is structurally unsound or a collapse of the building, structure or plant is imminent.*

### ***If there is no asbestos register at the workplace***

If there is no register for the workplace, the person who is carrying out the demolition or refurbishment work must not carry out the work until a licensed asbestos assessor determines whether asbestos or ACM is fixed to or installed in the structure or plant.

If a licensed asbestos assessor has reasonable grounds to be uncertain as to whether or not asbestos is present, before commencing demolition or refurbishment work the person carrying out the work must assume it is present. If it is determined or assumed to be present, the person carrying out the work must inform the occupier or owner (if it is domestic premises) or the person with management or control in any other case.

- **Demolition** – Once the person with management or control of the workplace or plant has been notified that asbestos is present and demolition work is to occur, they must decide whether the asbestos is likely to be disturbed by the work. If it is likely to be disturbed they must ensure, so far as is reasonably practicable, that the asbestos is removed before the work commences.
- **Refurbishment** – Once the person with management or control of the workplace or plant has been notified that asbestos is present and refurbishment work is to occur, they must decide whether the asbestos is likely to be disturbed by the work. If it is likely to be disturbed they must ensure, so far as is reasonably practicable, that the asbestos is removed. Where reasonably practicable, asbestos should be removed prior to refurbishment, renovation or maintenance rather than implementing other control measures, such as enclosure or sealing.

### ***Demolition and refurbishment at domestic premises***

When a person has been engaged to conduct demolition or refurbishment at a domestic premise, it becomes the workplace of that person. Consequently, that person must engage a licensed asbestos assessor to identify and, if necessary, engage a licensed asbestos removalist to remove asbestos before work commences.

The *Dangerous Substances (General) Regulation 2004* imposes similar obligations on homeowners. Should asbestos removal be required at residential premises, the homeowner must engage a licensed asbestos removalist to carry out the removal work.

- **Demolition** – A person who is engaged to conduct demolition work at a house (which has become their workplace) must engage a licensed asbestos assessor to identify asbestos under their management or control that is likely to be disturbed by the demolition work. They must ensure, so far as is reasonably practicable, that the asbestos is removed by a licensed asbestos removalist before the work commences.

If an emergency occurs, the person carrying out the demolition work at the domestic premise must ensure, so far as is reasonably practicable, that before the demolition work starts a procedure is developed that will explain how to minimise the risk of exposure of workers and persons in the vicinity of the demolition site and ensure the exposure standard is not exceeded, so far as is reasonably practicable. The person must also provide the regulator with written notice of the emergency immediately after they become aware of the emergency and before the demolition starts.

- **Refurbishment** – A person who is engaged to conduct refurbishment work at a house (which has become their workplace) must engage a licensed asbestos assessor to identify asbestos under their management or control that is likely to be disturbed by the refurbishment work. They must ensure, so far as is reasonably practicable, that the asbestos is removed by a licensed asbestos removalist before the work commences.

## 5.4 ASBESTOS-RELATED WORK

**Regulation 478-484** While work with asbestos is generally prohibited, the WHS Regulations allow work to occur on asbestos in certain circumstances: this is referred to as asbestos-related work.

Under the WHS Regulations, asbestos-related work includes:

- genuine research and analysis
- sampling and identification in accordance with the WHS Regulations
- maintenance of, or service work on, non-friable asbestos or ACM, fixed or installed before 31 December 2003, in accordance with the WHS Regulations
- the transport and disposal of asbestos and asbestos waste in accordance with jurisdictional legislation
- demonstrations, education or practical training in relation to asbestos or ACM
- display, or preparation or maintenance for display, of an artefact or thing that is, or includes, asbestos or ACM
- management in accordance with the WHS Regulations of in-situ asbestos that was installed or fixed before 31 December 2003
- work that disturbs asbestos during mining operations that involve the extraction of or exploration for a mineral other than asbestos
- laundering asbestos-contaminated clothing in accordance with the WHS Regulations
- minor or routine maintenance work, or other minor work, in accordance with this regulation
- where the regulator approves the method adopted for managing risks associated with asbestos
- soil that a licensed asbestos assessor has determined:
  - does not contain any visible asbestos
  - does not contain more than trace levels of asbestos determined in accordance with AS 4964:2004 *Method for the qualitative identification of asbestos in bulk samples*
- NOA managed in accordance with an asbestos management plan.

When undertaking asbestos-related work activities, the WHS Regulations require that it only be performed in accordance with the following requirements:

- any worker undertaking asbestos-related work must be informed of the health risks of exposure to asbestos and that they will need to undergo health monitoring. Further information can be found in *Guidance: Health Monitoring [under development]*
- a licensed asbestos assessor carries out air monitoring of the work area where asbestos-related work is being carried out if there is uncertainty as to whether the exposure standard is likely to be exceeded
- any asbestos that may be encountered by workers undertaking asbestos-related work must be identified by a licensed asbestos assessor, and if it is not possible to identify, it must be assumed asbestos is present
- the area in which asbestos-related work is undertaken is separate from the rest of the workplace, so far as is possible
- the asbestos work area must be signed and barricaded to ensure that other workers do not enter the area
- facilities must be provided to allow for the decontamination of workers, equipment and the items worked upon

- anything removed from the work area must be decontaminated before it is removed from the work area
- if material contaminated with asbestos is to be removed from the work area, it must be sealed within a container, which is decontaminated and labelled to indicate the presence of the asbestos and disposed of at a licensed disposal facility as soon as is practicable
- if personal protective equipment used in asbestos-related work is to be removed from the work area for disposal, it also must be sealed within a container, which is decontaminated and labelled to indicate the presence of the asbestos in accordance with the WHS Regulations and disposed of at a licensed waste facility as soon as reasonably practicable.

Appendix E provides an example of asbestos-related work.

### ***Managing risks associated with asbestos-related work***

If there is uncertainty as to whether asbestos is present or used in a certain activity at the workplace, the person with management or control of the workplace must assume asbestos is present and treat the activity as asbestos-related work or arrange for a sample to be analysed to determine if asbestos is present.

If asbestos is identified or assumed to be present, it is essential that the asbestos register be obtained and a decision made as to whether work can be done without disturbing the asbestos, for example:

- instead of drilling a hole through an asbestos-contaminated sheeting wall to install electrical wiring, the wiring might be able to be routed over the wall
- if a ventilation flue or pipe has to be installed in an asbestos-contaminated ceiling or roof, an alternative option may be to run the flue or pipe through a non-asbestos wall.

It is also essential to ensure all people carrying out the work have the appropriate training (refer to Section 6.3 of this Code), correct tools (refer to Section 6.4 of this Code), PPE including clothing, decontamination materials, labels and signs ready at the workplace before any work commences that may disturb the asbestos and to minimise the number of people in the area. For example:

- ***Consultation and training*** – Consultation with a person who may be affected by any maintenance and service work that might disturb asbestos should occur. People performing the work must receive all necessary training and access to the asbestos register, and the work should be documented and supervised
- ***Access to asbestos work area*** – The asbestos work area should be isolated and access restricted to only those people carrying out the asbestos work. Barriers and warning signs should be used
- ***PPE*** – PPE needs to be selected to prevent the contamination of clothing and provide adequate respiratory protection
- ***Replacing asbestos*** – Under the asbestos prohibition, wherever an asbestos component requires replacement the replacement product must be non-asbestos. It is illegal to reinstall or reuse any asbestos. Where an access hatch or panel that contains non-friable asbestos in good condition is moved in order to gain access, it may be replaced into its original position without modification
- ***Disposing of asbestos*** – All asbestos must be disposed of correctly. Single-use PPE used during maintenance and service work must also be disposed of. The *Code of Practice: How to Safely Remove Asbestos* provides further information on disposing of asbestos.

Before commencing any asbestos-related work, plastic sheeting may need to be placed on the floor and any other surfaces that may become contaminated with asbestos dust. At a minimum, heavy-duty 200 µm (micron) thick plastic sheeting should be used for this purpose.

### **Control measures for asbestos-related work**

Whatever the control method used, it should be effective in making all maintenance workers aware of the presence of asbestos and preventing any work activity that might expose them, or others nearby, to airborne asbestos. Particular attention should be paid to controlling work activities that affect inaccessible areas listed in the asbestos register, such as wall cavities and ceiling spaces.

Control measures include the following:

- Eliminate the risk by not conducting the work.
- Minimise the risk by using either an isolation control, engineering control or a combination of these.
  - An example of isolation by barrier is applying a small amount of substance, such as silicon or paste, to the surface of an asbestos cement sheet where a hole will be drilled. When the drill bit is drilled through the paste into the sheet and is removed, any loose fibres are collected in the paste, preventing them from becoming airborne. After drilling, the paste can be wiped clean with a rag and disposed of as asbestos waste.
  - An example of isolation by distance is used in the automotive industry for the removal of asbestos-containing brake mechanisms from vehicles. A designated area in the workshop is isolated by distance from other work areas. Signs and barriers are used to communicate that access to the area is restricted during the activity. The activity also requires safe work procedures but the isolation control ensures that other workers are not at risk due to their distance from the activity. All workers must be provided with instruction and training so they understand the reason for the control measure and the relevant procedures.
  - An example of engineering control is the use of a mini-enclosure to isolate the source of asbestos fibres combined with the use of extraction to capture and remove airborne fibres from the air in the work environment. This approach could be used for the task of removing and replacing the lock mechanisms from an asbestos-containing fire door. A purpose-built adjustable perspex box is fitted to the door surrounding the lock and handles on both sides of the door. Adjustments can be made to ensure a secure fit to the door and tape used to seal any possible gaps between the enclosure and the door. The box has access points for the operator's arms to enable work to be done on the lock, as well as an entry point for a vacuum hose. The vacuum can create a negative pressure inside the enclosure to prevent fibres from escaping and can also be held directly at the source to capture any fibres that become airborne as the lock is removed from the door. At completion of the task, the vacuum is used to clean and decontaminate the enclosure as well as the operator's arms (before removing them).
- If the risk is still present and attempts have been made to minimise the risk to health, so far as is reasonably practicable, through elimination, isolation and engineering controls, administrative controls can be implemented.

Administrative controls are systems of work or work procedures designed to eliminate or minimise risk. These controls are lower order controls that cannot be relied upon to be as effective as the higher order controls such as elimination, isolation and engineering. This is because administrative controls are systems or procedures that rely on human behaviour to be effective and can easily fail. Administrative control measures must be understood, implemented and maintained. This requires training, information and supervision for workers but the control measure can still fail if procedures are not followed or understood.

For some activities, administrative controls are the only practicable controls that can be implemented. An example of an administrative control for asbestos-related work is a procedure for collecting samples of ACM for the purpose of analysis. Collecting the

samples may involve breaking or dislodging ACM, which can lead to the release of airborne asbestos fibres and consequently a risk to health.

A safe work procedure for this task would include actions such as:

- isolating the area where the sample is to be collected
- assessing if the area is safe to enter
- minimising dust
- wearing suitable personal protective equipment
- sealing the samples, and storing and transporting them in a safe, secure manner.

For the administrative control measure to be effective and reduce risk, the licensed asbestos assessor conducting the sampling must understand the risk and implement all of the procedure. If the procedure is not followed, the health of the person conducting the sampling and others in the workplace may be at risk.

Appendix F outlines examples of safe that are likely to disturb asbestos and control measures that eliminate or minimise exposure to airborne asbestos, when carrying out service and maintenance tasks.

- If a risk to health still remains after the higher order control measures have been implemented, PPE must be used to supplement higher order controls.

Although PPE can be effective in controlling the risk from airborne asbestos fibres, the successful implementation and maintenance of this control measure requires further action and resources, including:

- the correct selection of appropriate PPE, including respirator, cartridge and coveralls
- the issuing of PPE to each individual
- training and supervision – all employees who are required to conduct asbestos-related activities and wear PPE must be given adequate training and supervision to enable them to fit and use the equipment correctly and conduct the task in a safe manner
- maintenance of PPE – non-disposable respirators must be checked before and after use to ensure the components are in good working order and are not damaged
- employee compliance and support for the system – it is essential that employees use PPE when it is required. An understanding of the risk to health from asbestos, the higher order control measures already in place and the need to use PPE to further reduce the risk to health all contribute to employees' willingness to use PPE.

Disposable coveralls need to be of a suitable standard to prevent penetration of asbestos fibres, so far as is practicable. Disposable coveralls rated type 5, category 3 (prEN ISO 13982-1) or the equivalent would meet this standard. Any clothing worn under coveralls must be disposed of or suitably bagged for laundering as asbestos-contaminated clothing.

## 5.5 DISPOSING OF ASBESTOS OR ACM

There are additional responsibilities related to the removal and disposal of asbestos, which are detailed in the *Code of Practice: How to Safely Remove Asbestos*, for example competency and licensing requirements.

Individual components and wiping rags must be placed in plastic bags, tying each bag separately prior to placing them in the container. Disposal bags need to be heavy duty (200 µm), made of clear plastic and marked with the label '**Caution Asbestos – Do not open or damage bag. Do not inhale dust**'. Asbestos waste awaiting disposal must be stored in closed containers (for example, 60 or 200 litre steel drums with removable lids or sealed skip).

Asbestos waste must be transported and disposed of in accordance with the relevant state or territory Environment Protection Authority (EPA) requirements. Asbestos waste can only be disposed of at a site licensed by the EPA and it must never be disposed of in the general waste system.

## 6. MANAGING EXPOSURE TO ASBESTOS OR ACM

---

### 6.1 MEASURING THE EXPOSURE STANDARD

Airborne respirable fibre concentrations can be estimated using available data (for example, monitoring reports, data from scientific literature) or past experience (for example, monitoring reports) of the process in question. In cases of doubt, a licensed asbestos assessor will confirm the estimates by measurement using the *Guidance Note on the Membrane Filter Method for Estimating Airborne Asbestos Fibres [NOHSC: 3003 (2005)]*.

Exposure monitoring measures the levels of respirable fibres in the breathing zone of the worker while work is being undertaken. Exposure monitoring must be carried out by a licensed asbestos assessor.

Where exposure monitoring is carried out by an assessor, it is good practice to stop work and investigate the cause if the level of airborne asbestos in the breathing zone reaches half the exposure standard.

Although the need for exposure air monitoring will depend on the particular circumstances, the results may assist in assessing risks associated with asbestos.

Other forms of air monitoring that are relevant to asbestos work are discussed in more detail in the *Code of Practice: How to Safely Remove Asbestos*. These include:

- control monitoring by a licensed asbestos assessor for ensuring that an enclosure or other controls used during asbestos removal are effective at preventing fibres from being found outside the work area
- clearance monitoring by a licensed asbestos assessor to ensure that the work area is free of asbestos fibres prior to being certified for reoccupation.

### 6.2 HEALTH MONITORING

**Regulation 435-444** A person conducting a business or undertaking must ensure health monitoring is provided to a worker if they are carrying out licensed asbestos removal work, other ongoing asbestos removal work or asbestos-related work and are at risk of exposure to asbestos when carrying out the work.

Health monitoring includes a medical examination to provide an initial baseline medical assessment. Health monitoring must include the following (unless another form of health monitoring is recommended by a registered medical practitioner):

- consideration of the worker's demographic, medical and occupational history
- consideration of records of the worker's personal exposure
- a physical examination of the worker with emphasis on the respiratory system, including standardised respiratory function tests unless another form of health monitoring is recommended by a registered medical practitioner.

Workers must be informed of any health monitoring requirements before the worker carries out work that may expose them to asbestos. Licensed asbestos assessors and licensed asbestos removalists must be health monitored.

#### ***When should health monitoring occur?***

Where a worker is at risk of exposure to asbestos due to work other than licensed asbestos removal, health monitoring must also be undertaken. Examples of work where there is a risk of exposure include undertaking maintenance work on ACM regularly as part of another job (for instance, electricians or building maintenance staff in older buildings) and carrying out asbestos-

related work. The need for health monitoring for these workers should be determined on the basis of:

- the potential for exposure
- the frequency of potential exposure
- the duration of the work being undertaken.

If a worker is carrying out licensed asbestos removal work, the health monitoring must be conducted prior to the worker commencing the work. Health monitoring should also be provided to the worker at regular intervals after commencing the asbestos-related work but at least once every two years.

### ***Who can carry out health monitoring?***

Health monitoring must be carried out under the supervision of a registered medical practitioner with the relevant competencies. Prior to deciding who the registered medical practitioner will be, the person conducting a business or undertaking must consult the worker.

### ***Who pays for health monitoring?***

The person conducting a business or undertaking must pay all expenses relating to health monitoring.

Where there are two or more persons that have a duty to provide health monitoring to a worker, they may choose that one person organises health monitoring (known as the person who commissions the health monitoring), however the costs must be shared equally between each person unless they agree otherwise.

### ***What information must be provided to the registered medical practitioner?***

The person who commissions health monitoring must provide the following information to the registered medical practitioner:

- their name and address
- the name and date of birth of the worker
- a description of the work the worker is, or will be, carrying out that has triggered the requirement for health monitoring
- whether the worker has started the work or, if the worker has commenced carrying out the work, how long this has been for.

### ***Health monitoring report***

A person who commissions health monitoring must take all reasonable steps to obtain a report from the registered medical practitioner as soon as practicable after the monitoring is carried out.

The health monitoring report must include the following information:

- the name and date of birth of the worker
- the name and registration number of the registered medical practitioner
- the name and address of the person conducting the business or undertaking who commissioned the health monitoring
- the date of the health monitoring
- any advice that test results indicate the worker may have contracted a disease, injury or illness as a result of carrying out the work that triggered the need for health monitoring

- any recommended remedial measures, including whether the worker can continue to carry out the work
- whether medical counselling is required for the worker.

That person must also give a copy of the report, as soon as reasonably possibly after obtaining it from the medical practitioner, to:

- the worker
- the regulator, if the report contains:
  - any test results that indicate the worker may have contracted a disease, injury or illness as a result of the work that triggered the need for health monitoring
  - any recommended remedial measures, including whether the worker can continue to carry out the work
- all other persons conducting a business or undertaking who have a duty to provide health monitoring for that worker.

Reports must be kept as a confidential record for at least 40 years after the record is made and identified as a formal record for the particular worker. The report and results must not be disclosed to anyone unless the worker has provided their written consent. However, if the person was releasing the record under a duty of professional confidentiality, the worker's written consent is not required.

### 6.3 TRAINING WORKERS ABOUT ASBESTOS OR ACM

**Regulation 39** A person conducting a business or undertaking must ensure that information, training and instruction provided to a worker is suitable and adequate, having regard to:

- the nature of the work carried out by the worker
- the nature of the risks associated with the work at the time the information, training or instruction is provided, and
- the control measures implemented.

The person must, so far as is reasonably practicable, ensure the information, training and instruction is provided in a way that is readily understandable by any person to whom it is provided.

**Regulation 445** A person conducting a business or undertaking must ensure workers who they reasonably believe may be involved in asbestos removal work in the workplace or the carrying out of asbestos-related work are trained in the VET course *Asbestos Awareness*.

In the ACT, all workers who may encounter asbestos as part of their work must complete mandatory Asbestos Awareness training.

In addition, site or job-specific training is required. It should include:

- purpose of the training
- health risks of asbestos
- types, uses and likely presence of asbestos in the workplace
- persons conducting a business or undertaking and the worker's roles and responsibilities under the asbestos management plan
- where the asbestos register is located, how it can be accessed and how to understand the information contained in it
- processes and safe work procedures to be followed to prevent exposure, including exposure from any accidental release of airborne asbestos
- where applicable, the correct use of PPE including respiratory protective equipment (RPE)

- the implementation of control measures and safe work methods to eliminate or minimise the risks associated with asbestos to limit the exposure to workers and other persons
- exposure standard and control levels for asbestos
- purpose of any exposure monitoring or health monitoring that may occur.

This training is more general than the training that a worker undertaking asbestos removal work would receive. Workers who are undertaking licensed asbestos removal work and licensed asbestos assessment are required to complete training in accordance with specific units of competency. Further information on these specific training requirements is available in the *Code of Practice: How to Safely Remove Asbestos*.

Records of all training must be kept while the worker is carrying out the work and for five years after the day the worker stops carrying out the work. These records must also be available for inspection by the regulator.

#### 6.4 LIMITED USE OF EQUIPMENT

**Regulation 446** A person conducting a business or undertaking must not use, or direct or allow a worker to use, specific equipment on asbestos or ACM unless the use of the equipment is controlled.

High-pressure water spray and compressed air must not be used on asbestos or ACM. However, high-pressure water spray can be used for fire fighting or fire protection. Power tools, brooms and any other equipment or tool that may release airborne asbestos in the workplace may only be used if it is controlled by it being:

- enclosed
- designed to capture or suppress airborne asbestos
- used in a way that is designed to capture or suppress airborne asbestos safely.

A combination of the controls mentioned above may be required to ensure that airborne asbestos is not generated.

Refer to Section 7.4 of this Code for further information on tools and equipment.

## 7. CONTROLLING THE RISKS

---

As mentioned in Chapter 3 of this Code, to eliminate risk of exposure, or if this is not reasonably practicable, minimising them so far as is reasonably practicable, a risk management process should be followed that involves identifying whether asbestos or ACM is at a workplace and including them in the asbestos register, assessing the risk of exposure and then implementing appropriate control measures. A licensed asbestos assessor will make recommendations on the risk control measures that should be put in place.

When choosing the most appropriate control measure, the following hierarchy of controls must be considered:

- eliminating the risk (for example, removing the asbestos)
- substituting for the risk, isolating the risk or applying engineering controls (for example, enclosing, encapsulation, sealing or using certain tools)
- using administrative controls (for example, safe work practices)
- using PPE.

A combination of these controls may be required in order to adequately manage and control asbestos or ACM.

### 7.1 REMOVING ASBESTOS

The ultimate goal is to have a workplace free from asbestos. Removal may be the most appropriate way to achieve this. Asbestos found in the Territory may *only* be removed by a licensed asbestos removalist. For example:

- **Friable asbestos** – If asbestos is friable and it has been determined that it should be removed, it must be removed by a Class A licensed removalist as soon as reasonably practicable. Instances where removal should be of the highest priority would include friable asbestos that is in poor condition and is located in an area where it poses a significant risk of exposure.
- **Non-friable asbestos** – If asbestos is non-friable, and has been determined that it should be removed, it must be removed by a licensed asbestos removalist as soon as reasonably practicable. Where it is not reasonably practicable to remove it, control measures must be put in place to eliminate any exposure, so far as is reasonably practicable, or to minimise exposure so far as is reasonably practicable, but always ensuring the exposure standard is not exceeded.

Specific instances where removal may be the best control measure include:

- asbestos lagging on pipes
- asbestos in plant
- asbestos-contaminated dust (ACD)
- loose fibre insulation
- cracked or damaged fibreboard containing asbestos.

The *Code of Practice: How to Safely Remove Asbestos* provides detailed guidance on appropriate work methods and additional controls for the removal of asbestos.

If it is not reasonably practicable to remove asbestos, then other control measures must be implemented to ensure people are not exposed to airborne asbestos, including either enclosing or sealing the asbestos.

## 7.2 ENCLOSING ASBESTOS

Where it is not reasonably practicable to remove asbestos, the preferred alternative control measure is enclosure.

The reviewing licensed asbestos assessor can advise on whether enclosure is a reasonable control measure. It will depend on a range of issues including impacts on productivity, the condition of the asbestos, the risk it poses to health and cost. Enclosure is an interim control measure and should be supported through regular inspections by a licensed asbestos assessor to identify if the asbestos requires removal due to damage or deterioration.

### ***What is enclosure?***

Enclosure is the creation of a structure built around the asbestos so that it is completely covered to prevent exposure of the asbestos to air and other substances. Enclosure creates a separate physical barrier that prevents access to the asbestos and therefore minimises the potential for exposure to airborne fibres. Enclosure should only be used on non-friable asbestos where removal is not reasonably practical and where the asbestos is at risk of damage from work activities. Consideration must be given when designing the enclosure for the need to provide access to the asbestos for regular inspection of its condition.

### ***Example of enclosure of asbestos as a control measure:***

A large dockside warehouse used for temporarily storing quantities of grain and stockfeed has walls made from a variety of materials, including AC sheet. Apart from the driver of a large front-end loader that is briefly driven into the warehouse to load or unload the feed, there are no other workers who work in the warehouse. An inspection of the AC sheet identifies that it is in good condition and noted that areas of previous minor damage (broken sheets) have been repaired appropriately and there is minimal risk of fibre release. However, it is decided there is a chance the sheets may be damaged again and if so, a risk to health may occur if fibres are released. A solid false wall is constructed to enclose the AC sheet and bollards are erected in front of the new wall to prevent collisions that may occur when the front-end loader is operating inside the warehouse. These changes are included in the asbestos register. The condition of the AC sheet is also monitored as well as the newly installed control measure.

## 7.3 ENCAPSULATION AND SEALING ASBESTOS

If the asbestos cannot be removed or enclosed, encapsulation or sealing may be recommended by a licensed asbestos assessor. If the asbestos is weathered, damaged or broken, it should be removed.

### ***What is encapsulation?***

Asbestos that is encapsulated in a resilient matrix, for example in reinforced plastics, vinyls, resins, mastics, bitumen, flexible plasters and cements have little opportunity to release airborne asbestos unless the matrix is damaged. This type of encapsulation will seal any loose fibres into place and should be used only when the original asbestos bond is still intact. Although encapsulation has limited application and can create a health risk for workers undertaking the activity, it is used when it would create a greater risk to remove the asbestos.

Encapsulation helps protect the asbestos from mechanical damage, increases the length of serviceability of the product and may also be used to prevent the release of airborne asbestos during the removal process.

If encapsulation is recommended by a licensed asbestos assessor, the person carrying out the work should:

- be trained and experienced in working with asbestos
- isolate the area
- use suitable RPE that complies with AS/NZS 1716:2003 *Respiratory Protective Devices*
- wear suitable protective clothing such as disposable overalls
- follow a safe system of work that reduces the risk of creating airborne asbestos
- follow a decontamination procedure upon completion of the task.

### ***What is sealing?***

Sealing is the process of covering the surface of the material with a protective coating over the asbestos to prevent exposure to airborne asbestos. Sealing asbestos is the least effective method for controlling the release of airborne asbestos. A licensed asbestos assessor will only recommend it as an interim control while a more effective control such as removing or enclosing can be implemented. It is commonly used for pipe, furnace and boiler insulation. The process either coats the material, reducing fibre release, or binds the fibres together. Asbestos should be sealed, coated or painted to protect it. Sealing is inappropriate where the sealed material is likely to suffer mechanical damage (for example, drilling or sanding).

It is important to select coating that is appropriate to the material to be sealed and has the required fire resistance, thermal insulation and ultraviolet (UV) properties necessary for it to be an effective control. The coating will deteriorate if it is exposed to chemicals, extreme heat or cold, wet or dry conditions or physical impacts. For example, epoxy-based paints offer better durability and strength than other paints.

Under no circumstances should asbestos be water blasted or dry sanded in preparation for painting, coating or sealing, as there is no system of use that can effectively capture or suppress asbestos fibres in such circumstances. To treat asbestos, a method should be used that does not disturb the asbestos.

An airless sprayer at low pressure is preferred to rollers or brushes on exposed (or unsealed) asbestos, as rollers and brushes may cause abrasion/damage and result in fibres being released from the surface of the material. When using a spray brush, never use a high-pressure spray to apply the paint. You should apply it with a dry airless spray using a low pressure to avoid generating high levels of asbestos dust. Several coatings may be needed for full protection.

The surface on which the sealant is to be applied should be cleaned with an asbestos vacuum cleaner fitted with a high efficiency particulate air (HEPA) filter. This will help capture any loose dust or debris from the surface and ensure good adhesion of the sealant. The surface during application should not be disturbed as this releases asbestos dust.

The use of sealants of a different colour to the asbestos being sprayed is helpful in identifying its condition over time and when conducting reviews of the asbestos register. A date-stamped photograph of the sealed surface is also a good way of assisting in the recording of condition.

**Example of sealing asbestos as a control measure:**

The extensive water pipe system in a large industrial workplace consists of AC piping and conduits. Some of the pipes are located underground, some within inaccessible areas such as walls, and others run aboveground throughout the workplace and are exposed. Connected to some of these pipes in the workplace are control valves that need to be accessed occasionally. Over time, as some of the AC pipes have deteriorated or been damaged, and where practicable to do so, sections of pipe have been removed to reduce the risk. Where a risk still remained, the pipes are enclosed so far as is reasonably practicable to reduce the risk further. Where control valves were connected and the AC pipe was in good condition, it was determined that it was not practicable to remove the asbestos due to lack of available replacement parts, nor was it practicable to enclose the asbestos because access was occasionally required. In this case, sealing the surface of the AC pipes near control valves with an epoxy-based paint to protect the material from deterioration and reduce the risk of airborne asbestos fibres was an appropriate option.

## 7.4 TOOLS AND EQUIPMENT

As mentioned in Section 6.4 of this Code, certain equipment must not be used on asbestos. It is therefore important to select the correct equipment to minimise the generation of airborne asbestos.

Manually operated (non-powered) hand tools should be used wherever possible. If they will not provide sufficient physical force to perform the required operation, low-speed, battery-powered tools that are able to be used in conjunction with wet methods for dust control are preferred.

Battery-powered tools should be fitted with a Local Exhaust Ventilation (LEV) dust control hood wherever possible. If an LEV dust control hood cannot be attached and other dust control methods—including pastes and gels—are unsuitable, then shadow vacuuming techniques should be used.

Where power tools with dust suppression/extraction are used, exposure monitoring should be carried out to ensure the controls used are effective in reducing the generation of fibres. It is good practice to ensure that the levels of airborne fibres do not exceed one half of the exposure standard (0.1 fibres/ml). If more than half the exposure standard is exceeded, work should be stopped and improvements made to the controls being used.

The use of high-pressure water and compressed air is prohibited under the WHS Regulations as they can cause asbestos to become friable.

### **Asbestos vacuum cleaners**

Asbestos vacuum cleaners should comply with the requirements in AS/NZS 60335.2.69:2003 *Household and similar electrical: Particular requirements for wet and dry vacuum cleaners, including power brush, for industrial and commercial use* (IEC 60335-2-69 Ed 3.2 MOD).

Household vacuum cleaners must never be used where asbestos is or may be present, even if they have a HEPA filter.

More comprehensive information about asbestos vacuum cleaners is provided in the *Code of Practice: How to Safely Remove Asbestos*.

## 7.5 SAFE WORK PRACTICES

It is important that safe work practices are in place when carrying out asbestos work or asbestos-related work. Wherever possible, dry asbestos should not be worked on. Techniques that prevent or minimise the generation of airborne asbestos fibres include:

- the wetting of asbestos using surfactants or wetting agents, such as detergent water

- the use of thickened substances, pastes and gels, including hair gel and shaving cream, to cover the surfaces of asbestos being worked on (these substances should be compatible with the conditions of use, including the temperature, and should not pose a risk to health)
- the use of shadow vacuuming
- performing the task in a controlled environment (for instance, a ventilated enclosure).

When selecting the best technique, the work should first be assessed for any electrical hazards that might result from the use of water or other liquids. If an electrical hazard exists, primary consideration should be given to removing the asbestos, rather than relying on dry work methods.

If asbestos-related work or maintenance or service tasks are assessed by a licensed asbestos assessor as involving similar levels of risk, they too may be performed only after the risks for that task have been assessed and appropriate control measures implemented.

The use of high-speed abrasive power and pneumatic tools, including angle grinders, sanders and saws, and high-speed drills, is prohibited under the WHS Regulations, except where used with dust suppression/extraction controls. These controls include local exhaust ventilation (LEV) dust control hoods that attach to the tool and isolate the area being worked on (drilled, sanded etc.) from the environment, ensuring that the dust is captured.

Appendix F outlines examples of safe work practices of service and maintenance tasks that are likely to disturb asbestos and control measures that have been implemented to eliminate or minimise exposure to airborne asbestos.

## 7.6 PERSONAL PROTECTIVE EQUIPMENT

PPE will need to be used, in combination with other effective control measures, when working with asbestos. The selection and use of PPE should be based on a risk assessment.

If work with asbestos requires the use of other chemicals that are themselves hazardous chemicals, a further risk assessment must be performed. Safety data sheets (SDS) must be referred to for information on appropriate PPE to use and any other precautions to take when using the chemicals (the manufacturer or importer of a hazardous chemical must supply an SDS on request).

The ease of decontamination should be one of the factors considered when choosing PPE.

For PPE that is not clothing and cannot be disposed of, it must be decontaminated and kept in a sealed container until it is reused for the purposes of asbestos-related work.

Further information on decontamination and asbestos waste disposal is available in the *Code of Practice: How to Safely Remove Asbestos*.

### Coveralls

- Protective clothing should be made from material capable of providing adequate protection against fibre penetration.
- When selecting protective clothing, other hazards—including heat stress, fire and electrical hazards—should also be considered.
- Disposable coveralls with fitted hoods and cuffs should be worn. Coveralls with open pockets and/or velcro fastenings should not be used, because these features can be contaminated and are difficult to decontaminate. Fitted hoods should always be worn over the straps of respirators and loose cuffs should be sealed with tape. Disposable coveralls rated type 5, category 3 (prEN ISO 13982–1) or equivalent would meet this standard.
- Asbestos fibres must be prevented from being transported outside the workplace by thoroughly vacuuming asbestos fibres from work clothes using an asbestos vacuum

cleaner or, depending on the level of contamination and risk, the use of a water spray bottle or damp cloths may be appropriate.

- Disposable coveralls need to be of a suitable standard to prevent penetration of asbestos fibres so far as is practicable. Disposable coveralls rated type 5, category 3 (prEN ISO 13982-1) or the equivalent would meet this standard.
- Non-disposable coveralls are not recommended and would require specialist laundering if used.
- Any clothing worn under coveralls must be disposed of or suitably bagged for laundering as asbestos-contaminated clothing.

### **Footwear and gloves**

- Laced boots should be avoided as they can be difficult to clean and asbestos dust can gather in the laces and eyelets. Laceless boots such as gumboots are preferred where practicable. If boot covers are worn, they should be of a type that has anti-slip soles to reduce the risk of slipping.
- Safety footwear must be decontaminated before being removed from the asbestos work area or sealed in double bags, the exterior of which is decontaminated, for use only on the next asbestos maintenance task. Alternatively, work boots that cannot be effectively decontaminated should be disposed of as asbestos waste at the end of the work.
- The use of protective gloves should be determined by a risk assessment. If significant amounts of asbestos fibres may be present, disposable gloves should be worn. Protective gloves can be unsuitable if dexterity is required. Personal decontamination including hand and fingernail washing should be carried out each time workers leave the asbestos work area and at the completion of asbestos maintenance and service work. Any gloves used must be disposed of as asbestos waste.

### **Respiratory protective equipment (RPE)**

- In general, the selection of suitable RPE depends on the nature of the asbestos work, the probable maximum concentrations of asbestos fibres that would be encountered in this work and any personal characteristics of the wearer that may affect the facial fit of the respirator (for example, facial hair and glasses).
- A licensed asbestos assessor should determine the most efficient respirator for the task.
- RPE should comply with AS/NZS 1716-2003 *Respiratory Protective Devices* and be selected, used and maintained in accordance with AS/NZS 1715-1994 *Selection, Use and Maintenance of Respiratory Protective Devices*. They must always be worn under fitted hoods. Face pieces should be cleaned and disinfected.
- RPE should be used until all contaminated disposable coveralls and clothing has been vacuum cleaned and/or removed and bagged for disposal and personal washing has been completed. RPE should be properly stored when not in use.
- More comprehensive advice on RPE is provided in the *Code of Practice: How to Safely Remove Asbestos*.

## **7.7 LAUNDERING CLOTHING**

Disposable coveralls should be used as protective clothing unless it is not reasonably practicable to do so. When non-disposable protective clothing is used, the contaminated clothing must be laundered in a suitable laundering facility that is equipped to launder asbestos-contaminated clothing. Contaminated protective clothing must not be laundered in homes. Any clothing worn under coveralls must be disposed of or suitably bagged for laundering as asbestos-contaminated clothing.

The laundering facility that is equipped to launder asbestos-contaminated clothing:

- should be informed of the asbestos contamination
- should have a management plan in place to control the release of respirable fibres
- should be constructed of smooth surfaces that are able to be lined with polythene sheeting or easily wiped clean
- may use conventional washing machines provided they are not used for other clothing
- may need to have a laundry room that is under negative pressure to eliminate or minimise the release of airborne asbestos fibres during the laundering process. This can be determined during the risk assessment
- should have procedures established for cleaning up spills and for the prevention of flooding of neighbouring areas.

The contaminated clothing should:

- be removed damp and thoroughly wet, then placed in impermeable containers or bags the outside of which are decontaminated and labelled to indicate the presence of asbestos before being sent to the commercial laundering facility
- not be allowed to dry out before washing.

At the laundry facility:

- the containers and bags holding the asbestos contaminated clothing should be opened in the washing machine while being further saturated. As a minimum, P1 respiratory protection must be worn while unloading clothes into the washing machine
- the empty containers or bags should be disposed of as asbestos waste. Waste water must be filtered and the filtering medium disposed of as asbestos waste.

## 7.8 CLEANING UP

Following any asbestos work carried out, there are requirements to ensure the work area, tools and workers are decontaminated and asbestos waste is disposed of properly. In addition to this, for licensed removal work a clearance certificate will be required before the work area can be reoccupied for ordinary use.

The *Code of Practice: How to Safely Remove Asbestos* provides details on decontamination and waste disposal.

## APPENDIX A – SAMPLING PROCESS

---

A licensed asbestos assessor should take the following steps to carry out sampling:

### **Step 1 – Preparation**

- Make sure no one else is in the vicinity when sampling is done.
- Shut down any heating or cooling systems to minimize the spread of any released fibres.
- Turn off any fans if you're inside. If outside, then sample on a non windy day.
- Do not disturb the material any more than is needed to take a small sample.
- Collect the equipment you will need for sampling, including:
  - pliers, resealable plastic bags, disposable coveralls, waterproof sealant, plastic drop sheet, water spray bottle
  - P2 respirator, rubber gloves.

### **Step 2 – Taking the sample**

- Wear disposable gloves.
- Put on respiratory protective equipment (RPE).
- Wear a pair of disposable coveralls.
- Lay down a plastic drop sheet to catch any loose material that may fall off while sampling.
- Wet the material using a fine mist of water containing a few drops of detergent before taking the sample. The water/detergent mist will reduce the release of asbestos fibres.
- Carefully cut a thumb nail piece from the entire depth of the material using the pliers.
- For fibre cement sheeting, take the sample from a corner edge or along an existing hole or crack.
- Place the small piece into the resealable plastic bag.
- Double bag the sample, include the date and location and an asbestos caution warning.
- Tightly seal the container after the sample is in it.
- Carefully dispose of the plastic sheet.
- Use a damp paper towel or rag to clean up any material on the outside of the container or around the area sampled.
- Dispose of asbestos materials according to state or territory and local procedures.
- Patch the sampled area with the smallest possible piece of duct tape to prevent fibre release.
- Send the sample to a NATA-accredited laboratory or one that is either approved or operated by the relevant regulator.




### **Step 3 – Cleaning up**



- Seal the edges with waterproof sealant where the sample was taken.
- Carefully wrap up the plastic drop sheet with tape and then put this into another plastic rubbish bag.
- Wipe down the tools and equipment with a dampened rag.
- Place disposable gloves and coveralls into a rubbish bag, along with the damp rag and drop sheet.
- Seal plastic bag.

- Wash hands.
- Keep RPE on until clean-up is completed.
- Follow a decontamination procedure (personal washing) upon completion of the task.

APPENDIX B – EXAMPLES OF WARNING SIGNS AND LABELS

---

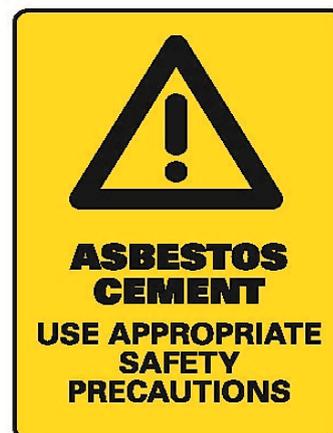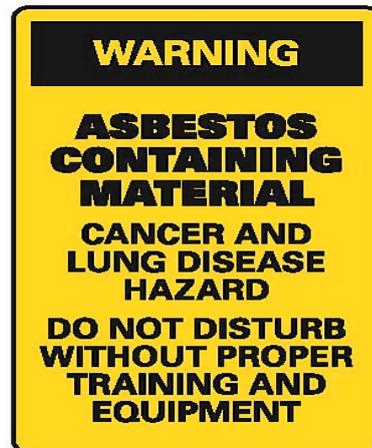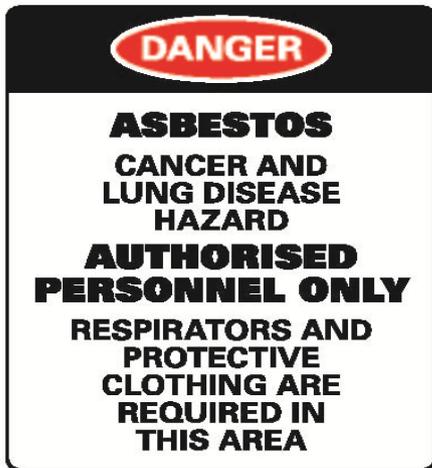

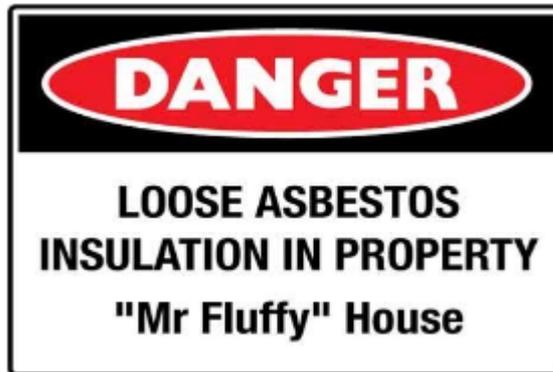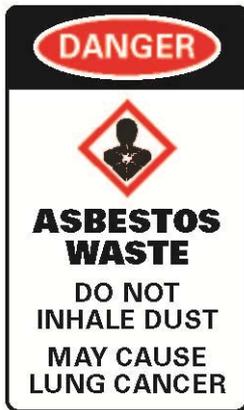

## APPENDIX C – TEMPLATE OF AN ASBESTOS REGISTER

---

ASBESTOS REGISTER					
Workplace address:			Name of Licensed Asbestos Assessor:		
Date of Identification	Type of Asbestos	Is it Friable or Non-Friable?	Condition of Asbestos	Specific Location of Asbestos	Is this an inaccessible area?

## APPENDIX D – EXAMPLE OF AN ASBESTOS REGISTER

ASBESTOS REGISTER					
<b>Workplace address:</b> XYZ Manufacturing Unit 3A, Trading Estate West, Anytown 9001			<b>Name of Licensed Asbestos Assessor:</b> Jim Smith, Site OHS manager (01) 3293 4012		
Date of Identification	Type of Asbestos	Is it Friable or Non-Friable?	Condition of Asbestos	Specific Location of Asbestos	Is this an inaccessible area?
1/2/2011	AC Roof Sheeting	Non-friable	Good, minor deterioration on Western End	Whole Roof to main building	Not routinely accessed
1/2/2011	Fibro Wall Cladding	Non-friable	Sound condition structurally, paint lifting in some places	Exterior of main Building	Accessible. Unlikely to be damaged.
1/2/2011	Pipe Insulation	Friable	Cracked at bends in pipe	Plant Room: Behind boiler for water system	Only accessed by maintenance staff
1/2/2011	Cement Flue	Non-friable	Good condition, coated	Plant Room: On top of boiler	Only accessed by maintenance staff
1/2/2011	Floor Tiles	Non-friable	Good condition, tiles under filing cabinet starting to lift	Main office, Asbestos backed vinyl floor tiles	Inaccessible

## APPENDIX E – EXAMPLE OF ASBESTOS-RELATED WORK

---

### *Working with asbestos friction materials*

The risk of exposure to significant amounts of dust that contains asbestos fibres may exist while removing and repairing brakes, clutches and high-temperature gaskets on motor vehicles.

If the following simple controls are applied carefully, it generally should not be necessary to carry out air monitoring in the workshop while servicing vehicle brakes, clutches and cylinder head/exhaust gaskets.

A HEPA-filter industrial vacuum cleaner should be certified by the manufacturer as fit for removal work and can be used to clean all asbestos dust from components and other parts in the immediate vicinity. It may be necessary to purchase or fabricate special hose nozzles to reach difficult areas to ensure components are effectively cleaned of asbestos. Any remaining dust needs to be removed with a wet rag.

A fine spray of water on the dust will dampen it and prevent it being dispersed. The component and parts in the immediate vicinity can then be wiped down with a wet rag. The rag can only be used once. It then needs to be placed in a plastic bag and into an asbestos waste disposal bin. Any spillage onto the workshop floor needs to be wiped up and disposed of in the same way. It is important that only a gentle misting spray is used as a coarse spray will disperse the asbestos fibres into the air.

A respirator certified by the manufacturer as suitable for asbestos dust (for example, a P1 or P2 disposable respirator) needs to be worn during the above cleaning processes.

Compressed air, water hoses and aerosol cans must not be used to clean asbestos dust off components in the open workshop as they will disperse large numbers of fibres into the air.

Personal decontamination should be carried out in accordance with the WHS Regulations and this Code.

### *Dedicated asbestos-handling area*

To minimise risks to other people, the area where asbestos components are cleaned and removed needs to be segregated and in a location where wind or cooling fans etc. will not disturb any dust. All workers must be provided with information and training on asbestos hazards, its presence and the safety procedures that must be followed.

For all removal:

- segregate the vehicle from surrounding removal work areas. Try to have at least three metres separation and avoid windy locations and cooling fans etc.
- use portable signs to indicate that asbestos removal is going on
- wear a P1 or P2 disposable respirator
- personal decontamination should be carried out in accordance with the WHS Regulations and this Code.

### *Brake assembly repairs – vacuum method*

- Use a HEPA-filter vacuum cleaner to clean the wheel prior to undoing the wheel nuts.
- Remove the wheel and vacuum any remaining dust on the wheel.
- Vacuum all dust off the brake assembly.
- Use a wet rag to wipe down all parts and remove final traces of dust.
- Vacuum any additional dust that is exposed during disassembly.
- Place the component and rags etc. into a plastic bag, seal or tie it and then place it into a marked plastic-lined disposal bin or skip.

- Personal decontamination should be carried out in accordance with the WHS Regulations and this Code.

#### *Brake assembly removal – wet method*

- Place a tray or tape plastic sheeting on the floor under the removal area to catch spillage and assist in the clean-up.
- Use a saturated rag to wet down the wheel and wipe off dust prior to removing the wheel nuts.
- Remove the wheel and clean off any remaining dust with the wet rag.
- Use a saturated rag and gentle water mist to thoroughly damp down any dust on the brake assembly.
- Personal decontamination should be carried out in accordance with the WHS Regulations and this Code.

#### *Brake disc pads*

- Use a saturated rag to wipe off exposed dust and dust exposed during disassembly. Wipe up any spillage on the floor.
- Place the component and rags etc. into a plastic bag, seal or tie it and then place it into a marked plastic-lined disposal bin or skip.
- Personal decontamination should be carried out in accordance with the WHS Regulations and this Code.

#### *Clutch removal and repairs*

- After separating the gearbox from the engine, vacuum/wet-wipe inside the bell housing and around the pressure plate.
- On removal of the pressure plate and clutch plate, vacuum/wet-wipe the flywheel, housing and components; place used rags and removed components in a plastic bag and seal.
- Place this plastic bag into a marked plastic-lined disposal bin or skip.
- Personal decontamination should be carried out in accordance with the WHS Regulations and this Code.

#### *Cylinder head and exhaust gaskets*

- If the gasket is damaged during separation of the components, wet it with water to control asbestos fibres.
- Keep the gasket wet and carefully remove it without using power tools.
- Wipe down the joint faces and the immediate area with a wet rag.
- Place the gasket and rag into a plastic bag and seal or tie it.
- Place this plastic bag into a marked plastic-lined disposal bin or skip.
- Personal decontamination should be carried out in accordance with the WHS Regulations and this Code.

#### *Brake shoe*

The process of removing asbestos-containing linings from brake shoes and clutch parts has the potential to release large quantities of asbestos fibres. All work involving power tools should be carried out within an enclosure that is fitted with an effective dust extraction and filtration system that will eliminate or minimise the release of airborne asbestos fibres. If components are to be hand-worked, carry out the following procedure:

- Undertake the work in a separate area away from other workers, preferably in a purpose-built enclosure.
- Thoroughly wet down the component to control dust/fibres.

- Wear PPE and RPE.
- Use local extraction to minimise the spread of dust/fibres.
- Control air monitoring must be carried out to determine respirable asbestos fibre exposure levels and the suitability of PPE.
- Clean up after removal with a vacuum cleaner and wet rag.
- Place waste asbestos into a plastic bag and seal or tie it.
- Place this plastic bag into a marked disposal bag, tie or seal it and place the bag into the marked plastic-lined disposal bin or skip (see disposal section below).
- Used respirators and overalls should not be worn away from the removal work area and need to be disposed of in the same way as asbestos waste.
- Personal decontamination should be carried out in accordance with the WHS Regulations and this Code.

## **APPENDIX F – RECOMMENDED SAFE WORKING PRACTICES**

---

As a first priority, planning for the maintenance of asbestos at the workplace must include consideration of the removal of the asbestos as the most preferred control option. A licensed asbestos assessor can advise on the best control option. Where removed, products containing asbestos must be replaced with products that do not contain asbestos. Removal of asbestos products must be done in accordance with the *Code of Practice: How to Safely Remove Asbestos*.

Below are some recommended safe working methods that demonstrate how control measures can be used when asbestos is present at the workplace:

- Safe work practice 1 – Drilling for asbestos-containing material
- Safe work practice 2 – Sealing, painting, coating and cleaning of asbestos-cement products
- Safe work practice 3 – Cleaning leaf litter from gutters of asbestos cement roofs
- Safe work practice 4 – Replace cabling in asbestos cement conduits or boxes
- Safe work practice 5 – Working on electrical mounting boards (switchboards) containing asbestos
- Safe work practice 6 – Inspection of asbestos friction materials.

## SAFE WORK PRACTICE 1 – DRILLING OF ACM

The drilling of asbestos cement sheeting can release asbestos fibres into the atmosphere, so precautions must be taken to protect the drill operator and other persons from exposure to these fibres. A hand drill is preferred to a battery-powered drill, because the quantity of fibres is drastically reduced if a hand drill is used.

<p>Equipment that may be required prior to starting work (in addition to what is needed for the task)</p>	<ul style="list-style-type: none"> <li>• A non-powered hand drill or a low-speed battery-powered drill or drilling equipment. Battery-powered drills should be fitted with a local exhaust ventilation (LEV) dust control hood wherever possible. If an LEV dust control hood cannot be attached and other dust control methods such as pastes and gels are unsuitable then shadow vacuuming techniques should be used</li> <li>• Disposable cleaning rags</li> <li>• A bucket of water, or more as appropriate, and/or a misting spray bottle</li> <li>• Duct tape</li> <li>• Sealant</li> <li>• Spare PPE</li> <li>• A thickened substance such as wallpaper paste, shaving cream or hair gel</li> <li>• 200 µm plastic sheeting</li> <li>• A suitable asbestos waste container (e.g. 200 µm plastic bags or a drum, bin or skip lined with 200 µm plastic sheeting)</li> <li>• Warning signs and/or barrier tape</li> <li>• An asbestos vacuum cleaner</li> <li>• A sturdy paper, foam or thin metal cup, or similar (for work on overhead surfaces only).</li> </ul>
<p>PPE</p>	<ul style="list-style-type: none"> <li>• Protective clothing and RPE (see AS1715, AS 1716). It is likely that a class P1 or P2 half face respirator will be adequate for this task, provided the recommended safe work procedure is followed.</li> </ul>
<p>Preparing the asbestos work area</p>	<ul style="list-style-type: none"> <li>• If the work is to be carried out at a height, appropriate precautions must be taken to prevent falls.</li> <li>• Ensure appropriately marked asbestos waste disposal bags are available.</li> <li>• Carry out the work with as few people present as possible.</li> <li>• Segregate the asbestos work area to ensure unauthorised personnel are restricted from entry (e.g. close door and/or use warning signs and/or barrier tape at all entry points). The distance for segregation should be determined by a risk assessment.</li> <li>• If drilling a roof from outside, segregate the area below.</li> <li>• If access is available to the rear of the asbestos cement, segregate this area as well as above.</li> <li>• If possible, use plastic sheeting, secured with duct tape, to cover any surface within the asbestos work area that could become contaminated.</li> <li>• Ensure there is adequate lighting.</li> <li>• Avoid working in windy environments where asbestos fibres can be redistributed.</li> <li>• If using a bucket of water, do not resoak used rags in the bucket, as this will contaminate the water. Instead, either fold the rag so a clean surface is exposed or use another rag.</li> </ul>
<p>Drilling vertical surfaces</p>	<ul style="list-style-type: none"> <li>• Tape both the point to be drilled and the exit point, if accessible, with a strong adhesive tape such as duct tape to prevent the edges crumbling.</li> <li>• Cover the drill entry and exit points (if accessible) on the asbestos with a generous amount of thickened substance.</li> <li>• Drill through the paste.</li> <li>• Use damp rags to clean off the paste and debris from the wall and drill bit.</li> <li>• Dispose of the rags as asbestos waste as they will contain asbestos dust and fibres.</li> <li>• Seal the cut edges with sealant.</li> <li>• If a cable is to be passed through, insert a sleeve to protect the inner edge of the hole.</li> </ul>
<p>Drilling overhead horizontal</p>	<ul style="list-style-type: none"> <li>• Mark the point to be drilled.</li> <li>• Drill a hole through the bottom of the cup.</li> </ul>

surfaces	<ul style="list-style-type: none"> <li>• Fill or line the inside of the cup with shaving cream, gel or a similar thickened substance.</li> <li>• Put the drill bit through the hole in the cup so that the cup encloses the drill bit, and make sure the drill bit extends beyond the lip of the cup.</li> <li>• Align the drill bit with the marked point.</li> <li>• Ensure the cup is firmly held against the surface to be drilled.</li> <li>• Drill through the surface.</li> <li>• Remove the drill bit from the cup, ensuring that the cup remains firmly against the surface.</li> <li>• Remove the cup from the surface.</li> <li>• Use damp rags to clean off the paste and debris from the drill bit.</li> <li>• Dispose of the rags as asbestos waste, as they will contain asbestos dust and fibres.</li> <li>• Seal the cut edges with sealant.</li> <li>• If a cable is to be passed through, insert a sleeve to protect the inner edge of the hole.</li> </ul>
Decontaminating the asbestos work area and equipment	<ul style="list-style-type: none"> <li>• Use damp rags to clean the equipment.</li> <li>• Carefully roll or fold any plastic sheeting used to cover any surface within the asbestos work area, so as not to spill any dust or debris that has been collected.</li> <li>• If necessary, use damp rags and/or an asbestos vacuum cleaner to clean any remaining visibly contaminated sections of the asbestos work area.</li> <li>• Place debris, used rags, plastic sheeting and other waste in the asbestos waste bags/container.</li> <li>• Wet wipe the external surfaces of the asbestos waste bags/container to remove any adhering dust before they are removed from the asbestos work area.</li> </ul>
Personal decontamination should be carried out in a designated area	<ul style="list-style-type: none"> <li>• If disposable coveralls are worn, clean the coveralls while still wearing RPE using a HEPA vacuum, damp rag or fine-water spray. RPE can be cleaned with a wet rag or cloth.</li> <li>• While still wearing RPE, remove coveralls, turning them inside-out to entrap any remaining contamination and then place them into a labelled asbestos waste bag.</li> <li>• Remove RPE. If non-disposable, inspect it to ensure it is free from contamination, clean it with a wet rag and store in a clean container. If disposable, cleaning is not required but RPE should be placed in a labelled asbestos waste bag or waste container.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>
Clearance procedure	<ul style="list-style-type: none"> <li>• Visually inspect the asbestos work area to make sure it has been properly cleaned.</li> <li>• Clearance air monitoring is not normally required for this task.</li> <li>• Dispose of all waste as asbestos waste.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>

## SAFE WORK PRACTICE 2 – SEALING, PAINTING, COATING AND CLEANING OF ASBESTOS-CEMENT PRODUCTS

These tasks should only to be carried out on asbestos that are in good condition. For this reason, the ACM should be thoroughly inspected before starting the work. There is a risk to health if the surface of asbestos cement sheeting is disturbed (e.g. from hail storms and cyclones) or if it has deteriorated as a result of aggressive environmental factors such as pollution. If it is so weathered that its surface is cracked or broken, the asbestos cement matrix may be eroded, increasing the likelihood that asbestos fibres will be released. If treatment is considered essential, a method that does not disturb the matrix should be used. Under no circumstances should asbestos cement products be water blasted or dry sanded in preparation for painting, coating or sealing.

Equipment that may be required prior to starting work (in addition to what is needed for the task)	<ul style="list-style-type: none"> <li>• Disposable cleaning rags</li> <li>• A bucket of water, or more as appropriate, and/or a misting spray bottle</li> <li>• Sealant</li> <li>• Spare PPE</li> <li>• A suitable asbestos waste container</li> <li>• Warning signs and/or barrier tape.</li> </ul>
PPE	<ul style="list-style-type: none"> <li>• Protective clothing and RPE (see AS1715, AS 1716). It is likely that a class P1 or P2 half face respirator will be adequate for this task, provided the recommended safe work procedure is followed. Where paint is to be applied, appropriate respiratory protection to control the paint vapours/mist must also be considered.</li> </ul>
Preparing the asbestos work area	<ul style="list-style-type: none"> <li>• If work is being carried out at heights, precautions must be taken to prevent falls.</li> <li>• Before starting, assess the asbestos cement for damage.</li> <li>• Ensure appropriately marked asbestos waste disposal bags are available.</li> <li>• Carry out the work with as few people present as possible.</li> <li>• Segregate the asbestos work area to ensure unauthorised personnel are restricted from entry (e.g. close door and/or use warning signs and/or barrier tape at all entry points). The distance for segregation should be determined by a risk assessment.</li> <li>• If working at a height, segregate the area below.</li> <li>• If possible, use plastic sheeting secured with duct tape to cover any floor surface within the asbestos work area which could become contaminated. This will help to contain any runoff from wet sanding methods.</li> <li>• Ensure there is adequate lighting.</li> <li>• If using a bucket of water, do not resoak used rags in the bucket, as this will contaminate the water. Instead, either fold the rag so a clean surface is exposed or use another rag.</li> <li>• Never use high-pressure water cleaning methods.</li> <li>• Never prepare surfaces using dry sanding methods. Where sanding is required, you should consider removing the asbestos and replacing it with a non-asbestos product.</li> <li>• Wet sanding methods may be used to prepare the asbestos, provided precautions are taken to ensure all the runoff is captured and filtered, where possible.</li> <li>• Wipe dusty surfaces with a damp cloth.</li> </ul>
Painting and sealing	<ul style="list-style-type: none"> <li>• When using a spray brush, <i>never</i> use a high-pressure spray to apply the paint.</li> <li>• When using a roller, use it lightly to avoid abrasion or other damage.</li> </ul>
Decontaminating the asbestos work area and equipment	<ul style="list-style-type: none"> <li>• Use damp rags to clean the equipment.</li> <li>• If required, use damp rags and/or an asbestos vacuum cleaner to clean the asbestos work area.</li> <li>• Place debris, used rags, plastic sheeting and other waste in the asbestos waste bags/container.</li> <li>• Wet wipe the external surfaces of the asbestos waste bags/container to remove any adhering dust before they are removed from the asbestos work area.</li> </ul>
Personal decontamination should be	<ul style="list-style-type: none"> <li>• If disposable coveralls are worn, clean the coveralls while still wearing RPE using a HEPA vacuum, damp rag or fine-water spray. RPE can be cleaned with a wet rag or cloth.</li> </ul>

<p>carried out in a designated area</p>	<ul style="list-style-type: none"> <li>• While still wearing RPE, remove coveralls, turning them inside-out to entrap any remaining contamination and then place them into a labelled asbestos waste bag.</li> <li>• Remove RPE. If non-disposable, inspect it to ensure it is free from contamination, clean it with a wet rag and store in a clean container. If disposable, cleaning is not required but RPE should be placed in a labelled asbestos waste bag or waste container.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>
<p>Clearance procedure</p>	<ul style="list-style-type: none"> <li>• Visually inspect the asbestos work area to make sure it has been properly cleaned.</li> <li>• Clearance air monitoring is not normally required for this task.</li> <li>• Dispose of all waste as asbestos waste.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>

<b>SAFE WORK PRACTICE 3 – CLEANING LEAF LITTER FROM GUTTERS OF ASBESTOS CEMENT ROOFS</b>	
Equipment that may be required prior to starting work (in addition to what is needed for the task)	<ul style="list-style-type: none"> <li>• A bucket of water, or more as appropriate, and detergent</li> <li>• A watering can or garden spray</li> <li>• A hand trowel or scoop</li> <li>• Disposable cleaning rags</li> <li>• A suitable asbestos waste container</li> <li>• Warning signs and/or barrier tape</li> <li>• An asbestos vacuum cleaner.</li> </ul>
PPE	<ul style="list-style-type: none"> <li>• Protective clothing and RPE (see AS1715, AS 1716). It is likely that a class P1 or P2 half face respirator will be adequate for this task, provided the recommended safe work procedure is followed.</li> </ul>
Preparing the asbestos work area	<ul style="list-style-type: none"> <li>• Since the work is to be carried out at a height, appropriate precautions must be taken to prevent the risk of falls.</li> <li>• Ensure appropriately marked asbestos waste disposal containers are available.</li> <li>• Segregate the asbestos work area to ensure unauthorised personnel are restricted from entry (e.g. use warning signs and/or barrier tape at all entry points). The distance for segregation should be determined by a risk assessment.</li> <li>• Segregate the area below.</li> <li>• Avoid working in windy environments where asbestos fibres can be redistributed.</li> <li>• If using a bucket of water, do not resoak used rags in the bucket as this will contaminate the water. Instead, either fold the rag so a clean surface is exposed or use another rag.</li> </ul>
Gutter cleaning	<ul style="list-style-type: none"> <li>• Disconnect or re-route the downpipes to prevent any entry of contaminated water into the waste water system and ensure there is a suitable container to collect contaminated runoff. Contaminated water must be disposed of as asbestos waste.</li> <li>• Mix the water and detergent.</li> <li>• Using the watering can or garden spray, pour the water and detergent mixture into the gutter but avoid over-wetting as this will create a slurry.</li> <li>• Remove the debris using a scoop or trowel. Do not allow debris or slurry to enter the water system.</li> <li>• Wet the debris again if dry material is uncovered.</li> <li>• Place the removed debris straight into the asbestos waste container.</li> </ul>
Decontaminating the asbestos work area and equipment	<ul style="list-style-type: none"> <li>• Use damp rags to wipe down all equipment used.</li> <li>• Use damp rags to wipe down the guttering.</li> <li>• Where practicable, and if necessary, use an asbestos vacuum cleaner to vacuum the area below.</li> <li>• Place debris, used rags and other waste in the asbestos waste container.</li> <li>• Wet wipe the external surfaces of the asbestos waste container to remove any adhering dust before it is removed from the asbestos work area.</li> </ul>
Personal decontamination should be carried out in a designated area	<ul style="list-style-type: none"> <li>• If disposable coveralls are worn, clean the coveralls while still wearing RPE using a HEPA vacuum, damp rag or fine-water spray. RPE can be cleaned with a wet rag or cloth.</li> <li>• While still wearing RPE, remove coveralls, turning them inside-out to entrap any remaining contamination and then place them into a labelled asbestos waste bag.</li> <li>• Remove RPE. If non-disposable, inspect it to ensure it is free from contamination, clean it with a wet rag and store in a clean container. If disposable, cleaning is not required but RPE should be placed in a labelled asbestos waste bag or waste container.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>
Clearance procedure	<ul style="list-style-type: none"> <li>• Visually inspect the asbestos work area to make sure it has been properly cleaned.</li> <li>• Clearance air monitoring is not normally required for this task.</li> <li>• Dispose of all waste as asbestos waste.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>

<b>SAFE WORK PRACTICE 4 – REPLACE CABLING IN ASBESTOS CEMENT CONDUITS OR BOXES</b>	
Equipment that may be required prior to starting the work (in addition to what is required for the task)	<ul style="list-style-type: none"> <li>• Disposable cleaning rags</li> <li>• A bucket of water, or more as appropriate, and/or a misting spray bottle</li> <li>• 200 µm thick plastic sheeting</li> <li>• Cable slipping compound</li> <li>• Appropriately marked asbestos waste disposal bags</li> <li>• Spare PPE</li> <li>• Duct tape</li> <li>• Warning signs and/or barrier tape</li> <li>• An asbestos vacuum cleaner.</li> </ul>
PPE	<ul style="list-style-type: none"> <li>• Protective clothing and RPE (see AS1715, AS 1716). It is likely that a class P1 or P2 half face respirator will be adequate for this task, provided the recommended safe work procedure is followed.</li> </ul>
Preparing the asbestos work area	<ul style="list-style-type: none"> <li>• If the work will be carried out in a confined space, appropriate precautions must be taken to prevent the risk of asphyxiation.</li> <li>• Ensure appropriately marked asbestos waste disposal bags are available.</li> <li>• Carry out the work with as few people present as possible.</li> <li>• Segregate the asbestos work area to ensure unauthorised personnel are restricted from entry (e.g. use warning signs and/or barrier tape at all entry points). The distance for segregation should be determined by a risk assessment.</li> <li>• Use plastic sheeting secured with duct tape to cover any surface within the asbestos work area which could become contaminated.</li> <li>• Place plastic sheeting below any conduits before pulling any cables through.</li> <li>• Ensure there is adequate lighting.</li> <li>• Avoid working in windy environments where asbestos fibres can be redistributed.</li> <li>• If using a bucket of water, do not resoak used rags in the bucket as this will contaminate the water. Instead, either fold the rag so a clean surface is exposed or use another rag.</li> </ul>
Replacement or installation of cables	<ul style="list-style-type: none"> <li>• Wet down the equipment and apply adequate cable slipping compound to the conduits/ducts throughout the process.</li> <li>• Clean all ropes, rods or snakes used to pull cables after use. Cleaning should be undertaken close to the point(s) where the cables exit from the conduits/ducts.</li> <li>• Ropes used for cable pulling should have a smooth surface that can easily be cleaned.</li> <li>• Do not use metal stockings when pulling cables through asbestos cement conduits.</li> <li>• Do not use compressed air darts to pull cables through asbestos cement conduits/ducts.</li> </ul>
Decontaminating the asbestos work area and equipment	<ul style="list-style-type: none"> <li>• Use damp rags to clean the equipment.</li> <li>• Wet wipe around the end of the conduit, sections of exposed cable and the pulling eye at the completion of the cable pulling operation.</li> <li>• If the rope or cable passes through any rollers, these must also be wet wiped after use.</li> <li>• Wet wipe the external surface of excess cable pulled through the conduit/duct, as close as possible to the exit point from the conduit, before it is removed from the work site.</li> <li>• Carefully roll or fold any plastic sheeting used to cover any surface within the asbestos work area, so as not to spill any dust or debris that has been collected.</li> <li>• If required, use damp rags or an asbestos vacuum cleaner to clean any remaining visibly contaminated sections of the asbestos work area.</li> <li>• Place all debris, used rags, plastic sheeting and other waste in the asbestos waste bags/container.</li> <li>• Wet wipe the external surfaces of the asbestos waste bags/container to remove any adhering dust before they are removed from the asbestos work area.</li> </ul>
Personal decontamination should be carried out in	<ul style="list-style-type: none"> <li>• If disposable coveralls are worn, clean the coveralls while still wearing RPE using a HEPA vacuum, damp rag or fine-water spray. RPE can be cleaned with a wet rag or cloth.</li> <li>• While still wearing RPE, remove coveralls, turning them inside-out to entrap any</li> </ul>

a designated area	<p>remaining contamination and then place them into a labelled asbestos waste bag.</p> <ul style="list-style-type: none"> <li>• Remove RPE. If non-disposable, inspect it to ensure it is free from contamination, clean it with a wet rag and store in a clean container. If disposable, cleaning is not required but RPE should be placed in a labelled asbestos waste bag or waste container.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>
Clearance procedure	<ul style="list-style-type: none"> <li>• Visually inspect the asbestos work area to make sure it has been properly cleaned.</li> <li>• Clearance air monitoring is not normally required for this task.</li> <li>• Dispose of all waste as asbestos waste.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>

## SAFE WORK PRACTICE 5 – WORKING ON ELECTRICAL MOUNTING BOARDS CONTAINING ASBESTOS

<p>If the asbestos-containing electrical mounting panel has to be removed for work behind the board, the procedures outlined in the <i>Code of Practice: How to Safely Remove Asbestos</i> must be followed. If drilling is required, the control process should be consistent with the measures in <b>Safe Work Practice 1</b>.</p>	
<p>Equipment that may be required prior to starting the work (in addition to what is required for the task)</p>	<ul style="list-style-type: none"> <li>• A non-powered hand drill or a low-speed battery-powered drill or drilling equipment. Battery-powered drills should be fitted with a LEV dust control hood wherever possible. If a LEV dust control hood cannot be attached and other dust control methods, such as pastes and gels, are unsuitable then shadow vacuuming techniques should be used</li> <li>• Duct tape</li> <li>• Warning signs and/or barrier tape</li> <li>• Disposable cleaning rags</li> <li>• A plastic bucket of water and/or a misting spray bottle</li> <li>• Spare PPE</li> <li>• A suitable asbestos waste container</li> <li>• 200 mm plastic sheeting</li> <li>• An asbestos vacuum cleaner.</li> </ul>
<p>PPE</p>	<ul style="list-style-type: none"> <li>• Protective clothing and RPE (see AS1715, AS 1716. It is likely that a class P1 or P2 half face respirator will be adequate for this task, provided the recommended safe work procedure is followed.</li> </ul>
<p>Preparing the asbestos work area</p>	<ul style="list-style-type: none"> <li>• As the work area will involve electrical hazards, precautions must be taken to prevent electrocution.</li> <li>• Ensure appropriately marked asbestos waste disposal bags are available.</li> <li>• Carry out the work with as few people present as possible.</li> <li>• Segregate the asbestos work area to ensure unauthorised personnel are restricted from entry (e.g. use warning signs and/or barrier tape at all entry points). The distance for segregation should be determined by a risk assessment.</li> <li>• Use plastic sheeting secured with duct tape to cover any surface within the asbestos work area which could become contaminated.</li> <li>• Ensure there is adequate lighting.</li> <li>• Avoid working in windy environments where asbestos fibres can be redistributed.</li> <li>• If using a bucket of water, do not resoak used rags in the bucket as this will contaminate the water. Instead, either fold the rag so a clean surface is exposed or use another rag.</li> </ul>
<p>Work on electrical mounting panels</p>	<ul style="list-style-type: none"> <li>• Providing the panel is not friable, maintenance and service work may include:                             <ul style="list-style-type: none"> <li>○ replacing asbestos containing equipment on the electrical panel with non-asbestos equipment</li> <li>○ operate main switches and individual circuit devices</li> <li>○ pull/insert service and circuit fuses</li> <li>○ bridge supplies at meter bases</li> <li>○ use testing equipment</li> <li>○ access the neutral link</li> <li>○ install new components/equipment.</li> </ul> </li> </ul>
<p>Decontaminating the asbestos work area and equipment</p>	<ul style="list-style-type: none"> <li>• Use damp rags to clean the equipment.</li> <li>• Carefully roll or fold any plastic sheeting used to cover any surface within the asbestos work area so as not to spill any dust or debris that has been collected.</li> <li>• If there is an electrical hazard, use an asbestos vacuum cleaner to remove any dust from the mounting panel and other visibly contaminated sections of the asbestos work area.</li> <li>• If there is no electrical hazard, wet wipe with a damp rag to remove minor amounts of dust.</li> <li>• Place debris, used rags, plastic sheeting and other waste in the asbestos waste bags/container.</li> <li>• Wet wipe the external surfaces of the asbestos waste bags/container to remove any adhering dust before they are removed from the asbestos work area.</li> </ul>

<p>Personal decontamination should be carried out in a designated area</p>	<ul style="list-style-type: none"> <li>• If disposable coveralls are worn, clean the coveralls while still wearing RPE using a HEPA vacuum, damp rag or fine-water spray. RPE can be cleaned with a wet rag or cloth.</li> <li>• While still wearing RPE, remove coveralls, turning them inside-out to entrap any remaining contamination and then place them into a labelled asbestos waste bag.</li> <li>• Remove RPE. If non-disposable, inspect it to ensure it is free from contamination, clean it with a wet rag and store in a clean container. If disposable, cleaning is not required but RPE should be placed in a labelled asbestos waste bag or waste container.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>
<p>Clearance procedure</p>	<ul style="list-style-type: none"> <li>• Visually inspect the asbestos work area to make sure it has been properly cleaned.</li> <li>• Clearance air monitoring is not normally required for this task.</li> <li>• Dispose of all waste as asbestos waste.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>

## SAFE WORK PRACTICE 6 – INSPECTION OF ASBESTOS FRICTION MATERIALS

This guide may be used when friction ACM (e.g. brake assemblies or clutch housings) need to be inspected or housings need to be cleaned. Compressed air must not be used to clean dust from a brake assembly.

<p>Equipment that may be required prior to starting the work (in addition to what is required for the task)</p>	<ul style="list-style-type: none"> <li>• A misting spray bottle</li> <li>• Duct tape</li> <li>• Warning signs and/or barrier tape</li> <li>• Disposable cleaning rags</li> <li>• A bucket of water and detergent</li> <li>• Spare PPE</li> <li>• A suitable asbestos waste container</li> <li>• A catch tray or similar container</li> <li>• An asbestos vacuum cleaner.</li> </ul>
<p>PPE</p>	<ul style="list-style-type: none"> <li>• Protective clothing and RPE (see AS1715, AS 1716). It is likely that a class P1 or P2 half face respirator will be adequate for this task, provided the recommended safe work procedure is followed.</li> </ul>
<p>Preparing the asbestos work area</p>	<ul style="list-style-type: none"> <li>• Ensure appropriately marked asbestos waste disposal bags are available.</li> <li>• Carry out the work with as few people present as possible.</li> <li>• Determine whether to segregate the asbestos work area</li> <li>• Ensure unauthorised personnel are restricted from entry by using barrier tape and/or warning signs.</li> <li>• Use a suitable collection device below where the work will be carried out to collect any debris/ runoff.</li> <li>• Ensure there is adequate lighting.</li> <li>• Avoid working in windy environments where asbestos fibres can be redistributed.</li> <li>• If using a bucket of water, do not resoak used rags in the bucket as this will contaminate the water. Instead, either fold the rag so a clean surface is exposed or use another rag.</li> </ul>
<p>Inspection of asbestos friction materials</p>	<ul style="list-style-type: none"> <li>• A misting spray bottle should be used to wet down any dust. If spray equipment disturbs asbestos, use alternative wetting agents e.g. a water-miscible degreaser or a water/detergent mixture.</li> <li>• Use the wet method, but if this is not possible the dry method may then be used.</li> </ul> <p><u>Wet method:</u></p> <ul style="list-style-type: none"> <li>• Use the misting spray bottle to wet down any visible dust.</li> <li>• Use a damp rag to wipe down the wheel or automobile part before removal. Ensure the dust is kept wet to prevent atmospheric contamination.</li> <li>• Use hand tools rather than power tools to reduce the generation of airborne fibres.</li> <li>• Partially open the housing and softly spray the inside with water using the misting spray bottle. Any spillage of dust, debris or water must be controlled (e.g. capturing any runoff in a container) and either filtered or disposed of as asbestos waste.</li> <li>• Open the housing and clean all asbestos parts using a damp rag, ensuring all runoff water is caught in an asbestos waste container.</li> </ul> <p><u>Dry method:</u></p> <ul style="list-style-type: none"> <li>• Place a tray under the components to catch dust or debris spilling from the housing or components during the inspection and dispose of any material as asbestos waste.</li> <li>• Use an asbestos vacuum cleaner to remove asbestos from the brakes and rims or other materials before carrying out the inspection.</li> </ul>
<p>Decontaminating the asbestos work area and equipment</p>	<ul style="list-style-type: none"> <li>• Use damp rags to clean the equipment, including the dust collection tray.</li> <li>• If necessary, use damp rags or an asbestos vacuum cleaner to clean any remaining visibly contaminated sections of the asbestos work area.</li> <li>• Place debris, used rags and other waste in the asbestos waste bags/container.</li> <li>• Wet wipe the external surfaces of the asbestos waste bags/container to remove any adhering dust before removing them from the asbestos work area.</li> </ul>

<p>Personal decontamination should be carried out in a designated area</p>	<ul style="list-style-type: none"> <li>• If disposable coveralls are worn, clean the coveralls and RPE while still wearing them using an asbestos vacuum cleaner, damp rag or fine-water spray. RPE can be cleaned with a wet rag/cloth.</li> <li>• While still wearing RPE, remove coveralls, turning them inside-out to entrap any remaining contamination and then place them into a labelled asbestos waste bag.</li> <li>• Remove RPE. If non-disposable, inspect it to ensure it is free from contamination, clean it with a wet rag and store in a clean container. If disposable, cleaning is not required but RPE should be placed in a labelled asbestos waste bag or waste container.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>
<p>Clearance procedure</p>	<ul style="list-style-type: none"> <li>• Visually inspect the asbestos work area to make sure it has been properly cleaned.</li> <li>• Clearance air monitoring is not normally required for this task.</li> <li>• Dispose of all waste as asbestos waste.</li> </ul> <p>Refer to the <i>Code of Practice: How to Safely Remove Asbestos</i> for more information.</p>